
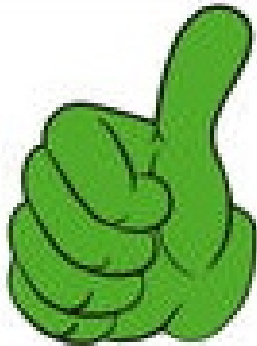


# 915 2-wire video doorphone system

User Manual  
Villa Type


# The Cable Specifications of 915 2-wire System

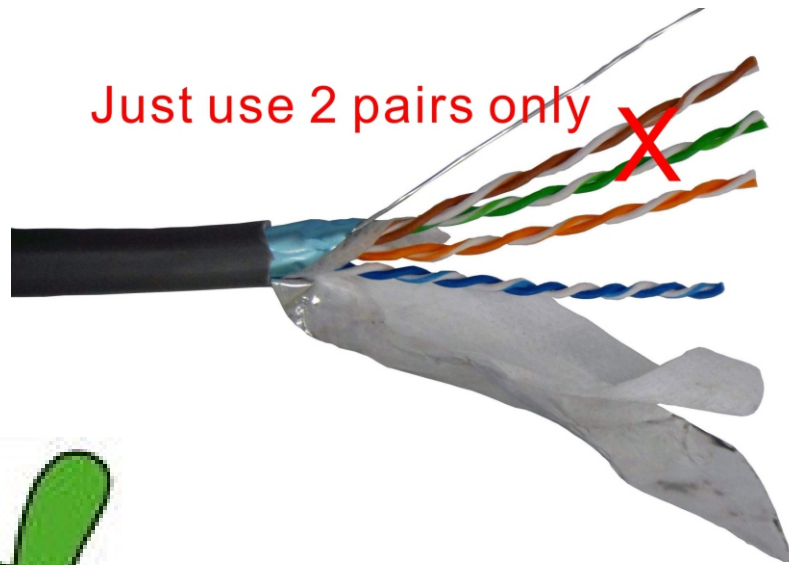

**CAT 5e STP**  
**with shield(aluminum foil)**  
**anti-interference**


Quality is the best and the distance up to 100M is still good ,with power line together without signal/video interference.

**Please pay much attention , there are 4 pairs in CAT5e , just use 2 pairs of them , other 2 pairs never to use it .**

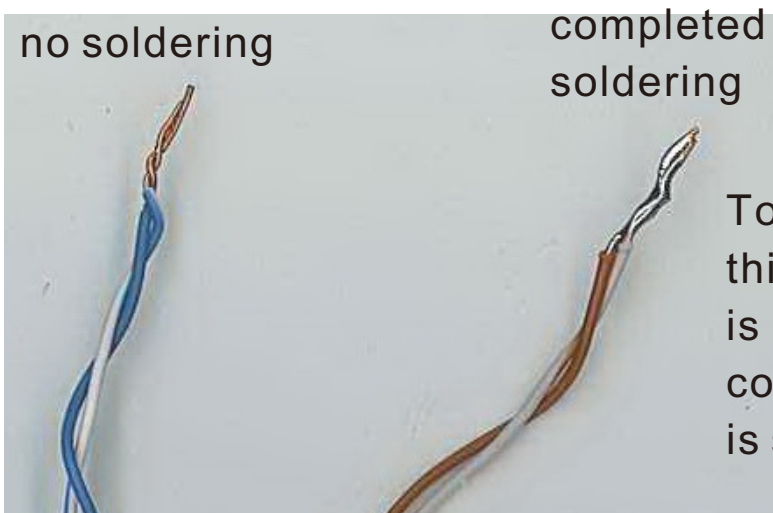


To solder 2 cores connection point , this way can prevent single core is broken and make the wire connection is stable .


# 915C10AL Color Aluminum Camera

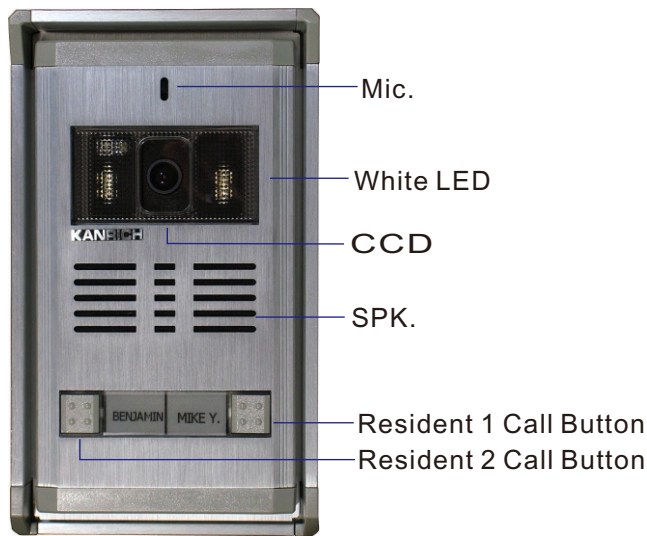

## Inside View

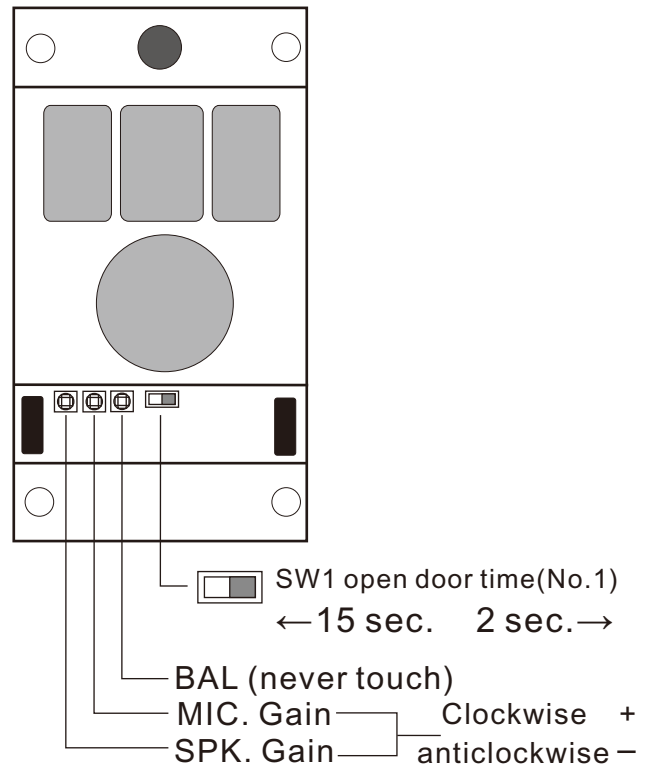

## Terminals

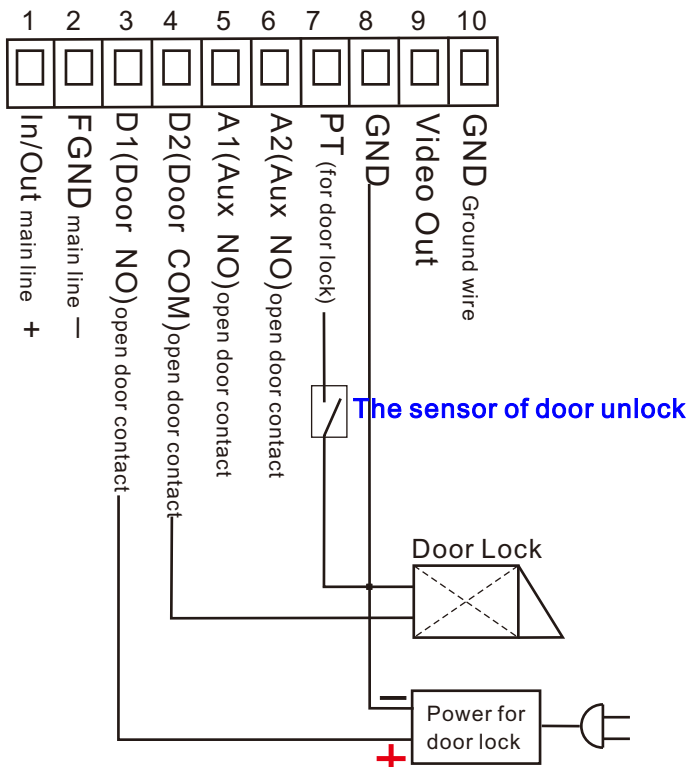

(The power of door lock must be an independent power, door phone power can't share power with door lock.)

## Specifications :

Working Voltage : DC 15V from PH-915P

Current Consumption: Standby 60mA  
Working 250mA

CCD: Color Sony 1/3" Board Camera

Resolution: 510(H) x 492(V)

Signal Noise Rate : More than 48db

Picture Pixels: 270,000 Pixels

Illumination : 4 white LEDs

Communication Interface :

the modulated carrier wave signal

Installation Way : Flush Mounting Type or  
Surface Mounting Type

Front Material : Aluminum Panel

Dimensions : 200(H)/120(W)/55(H) mm


Weights: 570 gs

Measurement: 0.07 cuft

Accessories: Terminal connector \*1  
screw bag \*1


# Flush Pre-box for model "AL" Camera

175/105/60mm

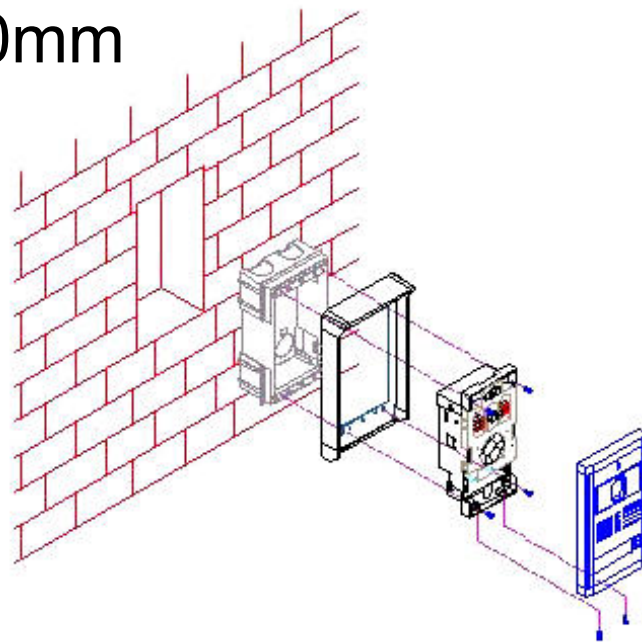

# Surface Pre-box for model "AL" Camera


210/125/60mm

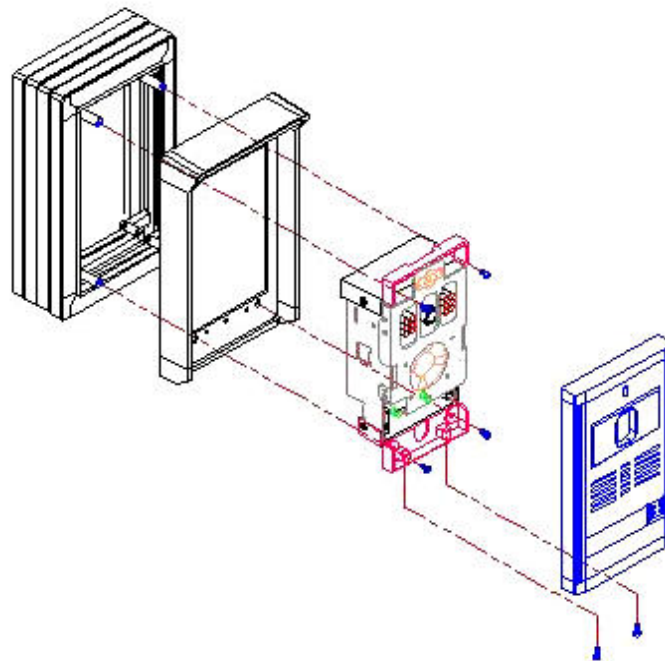

# 915CAL Aluminum Camera with CCD


# 915CALM Aluminum Camera & Mifare Card Reader

## Inside View

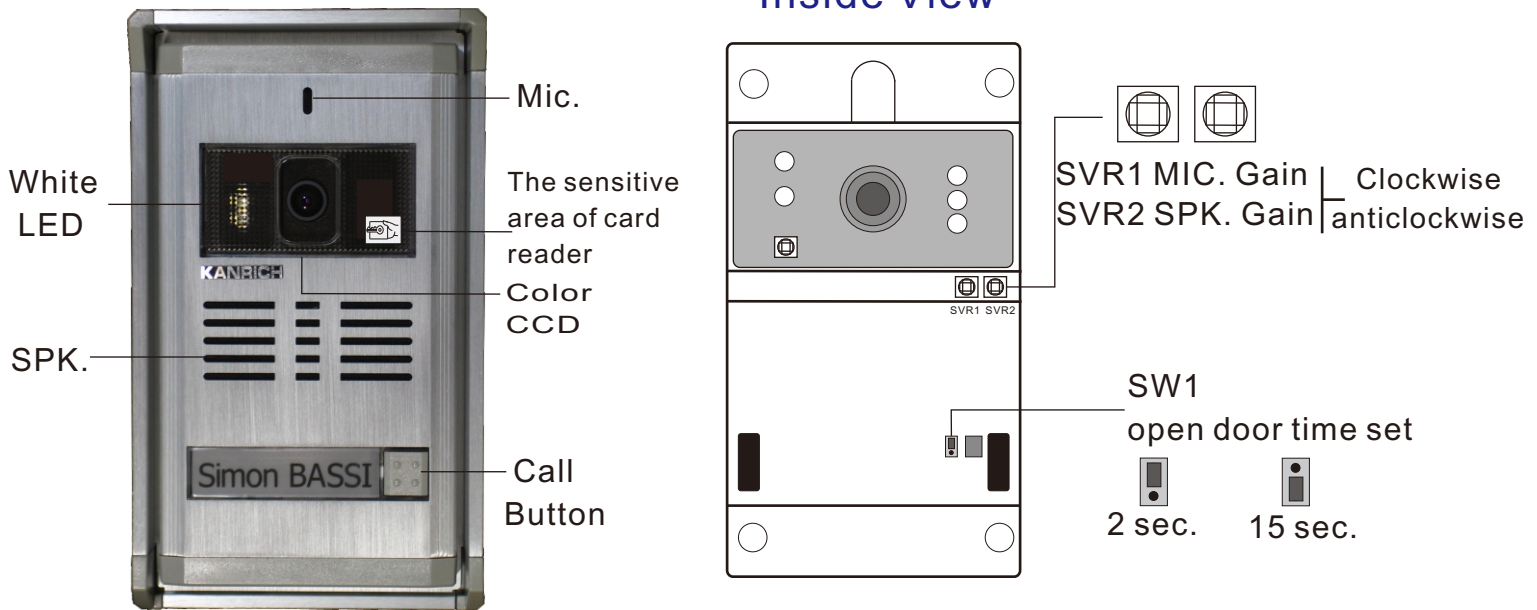

Please connect an external power to Mifare card reader

## Rear View

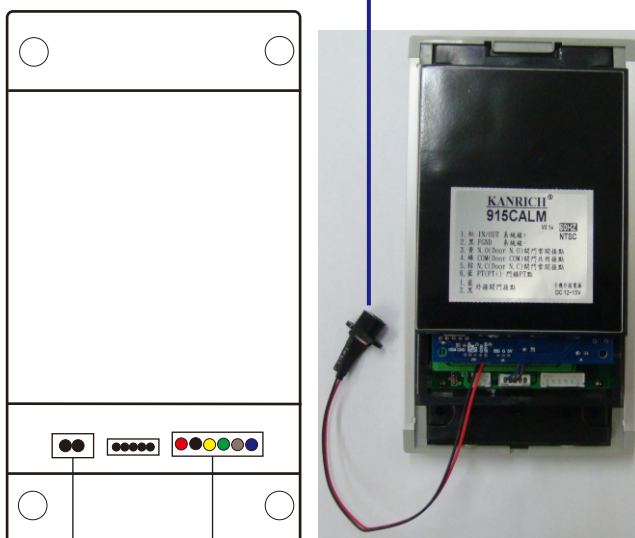

## Specifications :

Working Voltage : DC 15V from PH-915P

Current Consumption: Standby 110mA

Working 320mA

CCD: Color Sony 1/3" Board Camera

Resolution: 510(H) x 492(V)

Signal Noise Rate : More than 48db

Picture Pixels: 270,000 Pixels

Illumination : 2 white LEDs

Communication Interface :

Installation Way : Flush Mounting Type or Surface Mounting Type

Front Material : Aluminum Panel

Dimensions : 200(H)/120(W)/55(H) mm

Weights: 570 gs

Measurement: 0.07 cuft




Accessories: 2-pin white connector\*1

6-pin white connector\*1

diode N4007 \*1

Screw bag\*1

## Connector Explanation

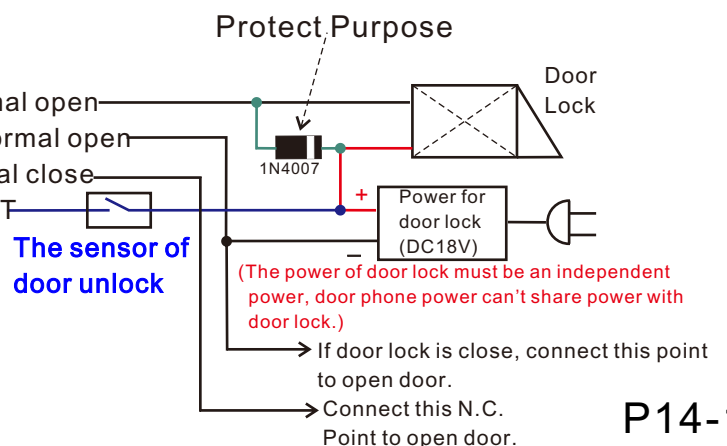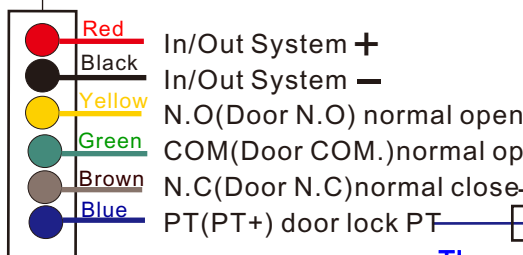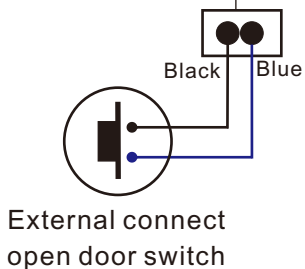

# The user guide of Card Reader For CALM - Villa Type

To add new cards:

1.To add cards:

By Master REG (The Master Card for registering a new card or cards)

Steps: To swipe Master REG one time--beep--**green light flashing**

--swipe new card(or cards)--beep in twice

Successfully register new card (or cards), if you want to stop adding cards,

just swipe Master REG one time --beep--**green light off**--finish.

2.To **delete** cards:

By Master DEL (The Master Card for deleting a new card or cards)

Steps: To swipe Master DEL one time--beep--**red light flashing**

--swipe the card(or cards) want to be deleted--beep in twice

Successfully delete a card (or cards), if you want to stop deleting cards, just swipe Master DEL one time

--beep--**red light off**--finish.

## Mifare Key Tag



Please add "00" before the 8-digit number to be 10-digit.

# 915M35 3.5" Handsfree Color Monitor



## Handsfree Talking / Monitoring Button

Handsfree Talking button: Press it for getting a call and talking .  
After talking press it again for finish.

Monitoring button :Press it to start monitor screen and monitor door camera situation and also to talk with camera ,press it again for finish.

The talking time limitation is 180 sec.

## Code setting button/Main monitor & Sub monitor setting button

Code setting button : When doorphone system is standby and press "  +  ", you will hear "Du" on 915M35 and on camera ,too.

Please enter "monitor code"on camera immediately , 915M35 will get this call and send "Ding-Dong" , it means a successful code setting .

Main monitor-Sub monitor setting button : Hold this button 8 sec. at least , you will hear a high-pitch "Du" , it means to set main monitor successfully.

Then, hold this button 8 sec. at least , you will hear a deep "Du" , it means to set sub monitor successfully.


**PS. One apartment only can set one main monitor, if you set 2 main monitors in one apartment , camera can't call monitor normally ,the doorphone system will happen problem ,camera can't make a call to this apartment .**



## Intercom Button/ NO Contact Point

Intercom Press this button to intercom and talk with other monitors in this apartment .

NO Contact Point When monitor screen is started , press this button and drive this contact point in camera then to start other devices.

## Door Release Button /Code setting button

Door Release Press "  " this button for opening door.

Code setting button : When doorphone system is standby and press "  +  ", you will hear "Du" on 915M35 and on camera ,too.

Please enter "monitor code"on camera immediately , 915M35 will get this call and send "Ding-Dong" , it means a successful code setting .



Door Status Indicator : The red LED constantly lights on , it means the door is open, the red LED lights off , it means the door is close .

"In Use" indicator / Intercom call Indicator(Red):


The red LED constantly on, it means one of residents is using this doorphone system, please wait this resident finishing talking then to use it .

Intercom Indicator : This indicator is flashing , it means intercom function is started.



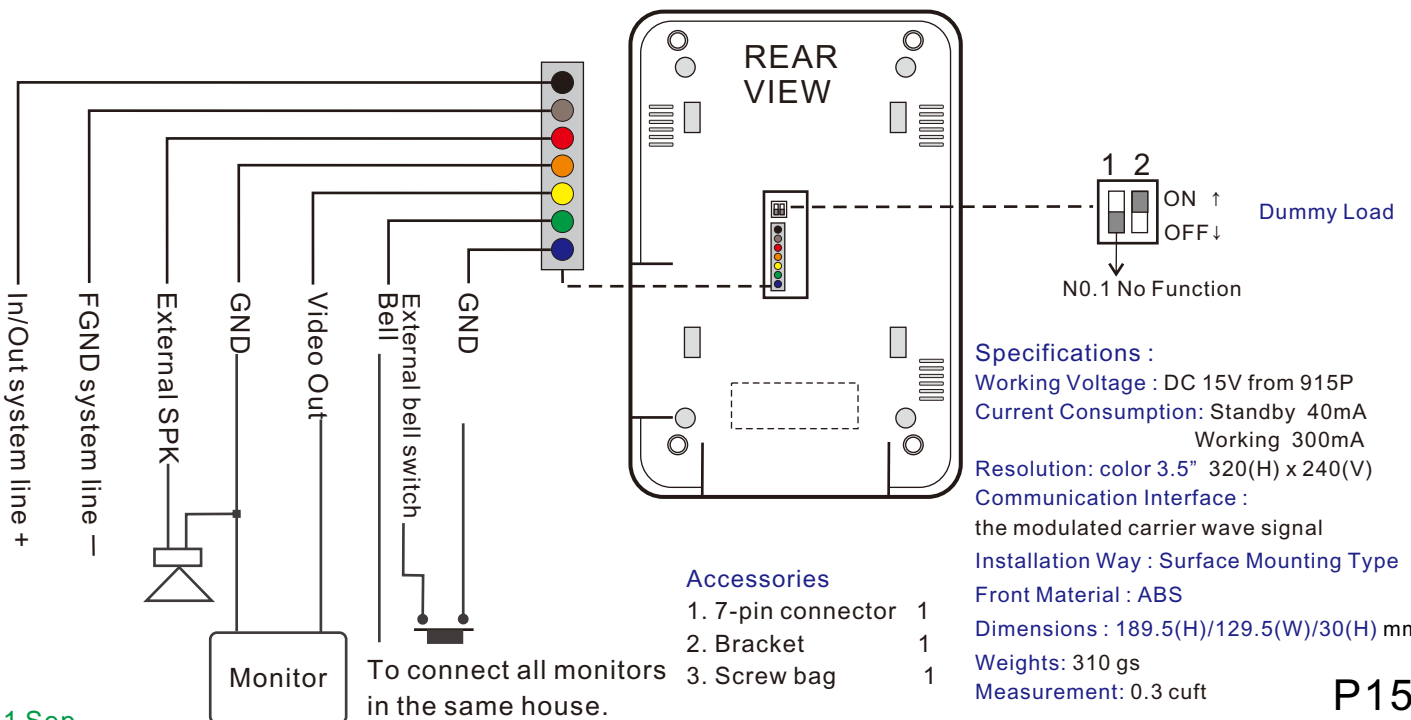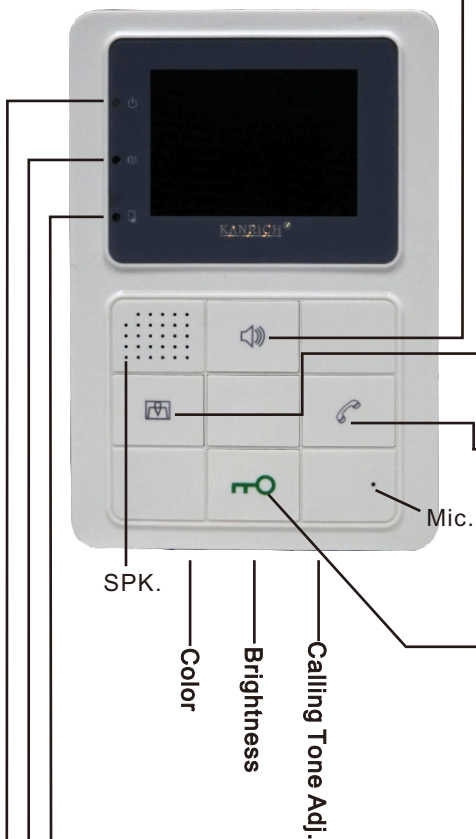


 


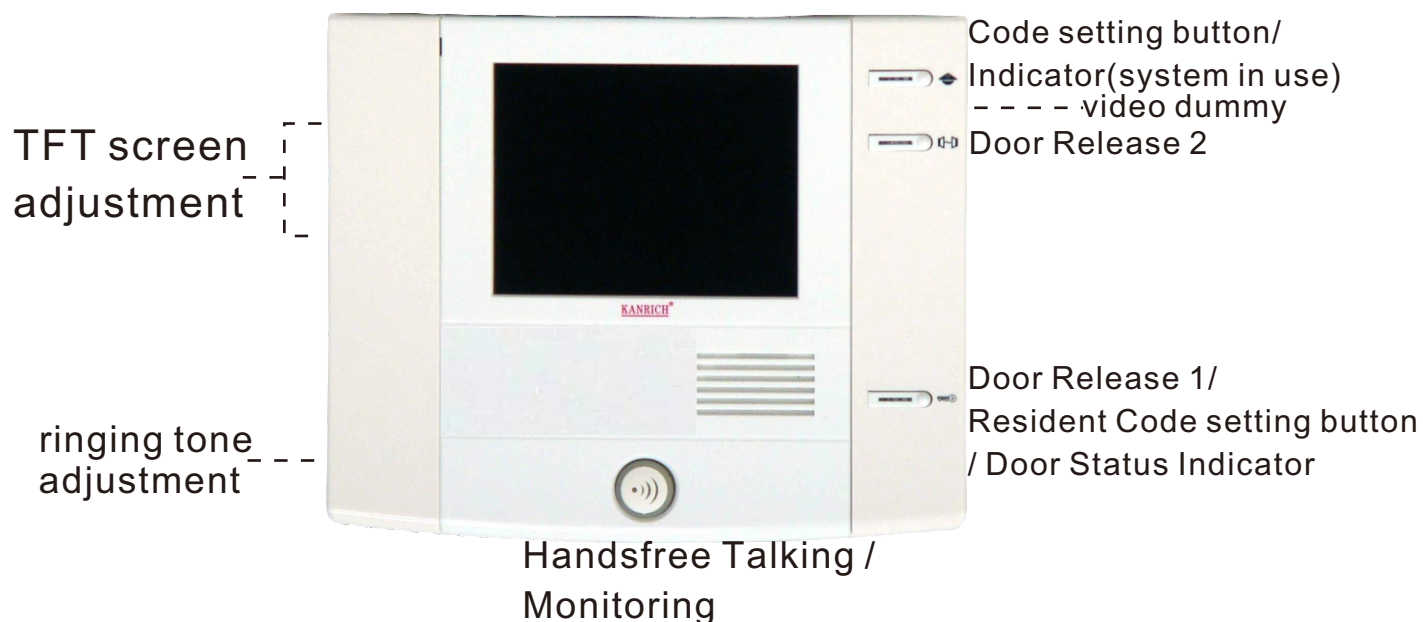





Power Indicator : The Blue LED constantly lights on.



# 915Mi 4" Handsfree video monitor



## Buttons/Indicators

-  Resident Code setting button  
 When doorphone system is standby and press "  +  ", you will hear "Du" on monitor and on camera ,too. Please enter "monitor code" on camera immediately , monitor will get this call and send "Ding-Dong" , it means a successful code setting .  
**"in use" indicator**  
 The red LED constantly on, it means one of residents is using this doorphone system, please wait this resident finishing talking then to use it .If you find this indicator is flashing in operation ,please press "  " twice , let system return to "standby" status .
-  Door Release 2  
 When monitor screen is started , press "  " for opening another door lock of another door.
-  Door Release 1/Code setting button  
 Press  for opening door lock of door no. 1 .  
**Door Status Indicator**  
 The red LED constantly on , it means the door no.1 is open, the red LED lights off ,it means the door is close .
-  Handsfree Talking  
 Press  for getting a call and talking , press  one more time for off line.  
 The talking time limitation is 180 sec. If after talking , the resident forgot to press  for finishing talking, the system will be off line automatically 180 sec. later .  
**Monitoring**  
 Press  to start monitor screen and monitor door camera situation and also to talk with camera , press  one more time for finish.

TFT screen adjustment

Up : TFT screen adjustment buttons---CONTRAST / BRIGHTNESS / COLOR / RESET / EXIT

Middle : + adjustment +

Down : - adjustment -




# 915Mi 4" Handsfree video monitor

## Switch


Video Dummy  
switch up ----OFF  
switch down ---ON

Ringing Tone Adjustment  
Up --- volume increase  
Middle --- volume middle  
Down --- volume down

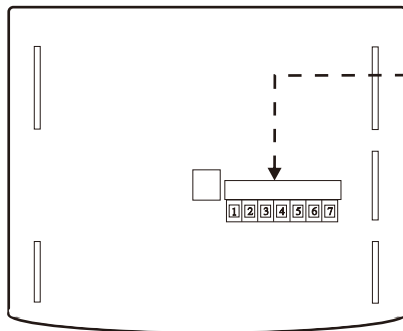


Monitor  
rear view

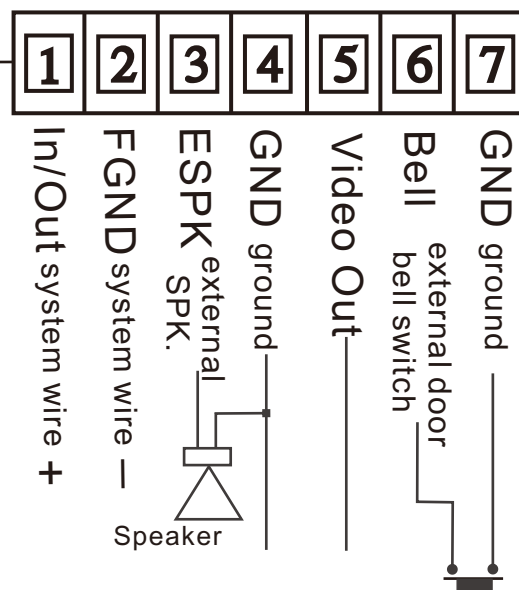

Terminals



### Monitor code setting steps :

1. When doorphone system is standby and press "  " + "  " .
2. You will hear "Du" on monitor and on camera , too.
3. Please enter "monitor code" on camera immediately , monitor will get this call and send "Ding-Dong" as well as the screen is started at the same time, press "  " to close screen. It's a successful code setting .

### Specifications

Working Voltage: DC15V from 915P  
Current Consumption :  
Stand-by 40mA, Working 300mA  
Resolution: Color 4" 960(H)x234(V)  
Communicating Interface:  
the modulated carrier wave signal  
Installation way: Surface mounting type  
Material: ABS heat-resistant plastic  
Dimensions: (H)140mm/(W)170mm/(D)35mm  
Weights : 300gs  
Measurement: 0.2 cuft

### Accessories

- |                             |   |
|-----------------------------|---|
| 1. Green terminal connector | 1 |
| 2. Monitor Bracket          | 1 |
| 3. Screw Bag                | 1 |

# 915M7 7" Handsfree video monitor



Calling Tone Volume Knob ↑ +  
 Color Adj. Knob  
 Brightness Adj. Knob ↓ -

Side View

**Power Indicator** Power Indicator - green - power on

**"in use" indicator / Intercom Indicator (Red)**

This indicator is on - It means one of residents is using , please wait this resident finishing talking then to use . Green/Red mutual flashing, it means intercom function is started.

**Door Status Indicator(Red)**

The red LED constantly lights on , it means the main door is open, the red LED lights off ,it means the main door is close .

**Intercom Button/ N.O. Contact Point**

**Intercom** Press this button to intercom and talk with other monitors in this apartment .

**N.O. Contact Point** When monitor screen is started , press this button and drive this contact point in camera then to start other devices.

**Call 915CC/Code setting button/Main monitor & Sub monitor setting button**

**Call 915CC :** Press + to call control center and talk to the guard ; press again for finishing talk.

**Code setting button :** When doorphone system is standby and press " + ",you will hear "Du" on 915M7 and on camera ,too. Please enter "monitor code"on camera immediately , 915M7 will get this call and send "Ding-Dong" , it means a successful code setting .

**Main monitor-Sub monitor setting button :** Hold this button 8 sec. at least ,you will hear a high-pitch "Du", it means to set main monitor successfully.Then, hold this button 8 sec. at least , you will hear a deep "Du",it means to set sub monitor successfully.

**PS. One apartment only can set one main monitor, if you set 2 main monitors in one apartment ,camera can't call monitor normally ,the doorphone system will happen problem ,camera can't make a call to this apartment .**

**Door Release Button /Code setting button**

**Door Release** Press " " to open the door.



**Code setting button :** When doorphone system is standby and press "this button + code setting button", you will hear "Du" on 915M7 and on camera ,too. Please enter "monitor code"on camera immediately , 915M7 will get this call and send "Ding-Dong" , it means a successful code setting .

**Handsfree Talking / Monitoring Button**

**Handsfree Talking button:** Press for getting a call and talking . After talking press again for finish.

**Monitoring button :** Press to start monitor screen and monitor door camera situation and also to talk with camera ,press again for finish. The talking time limitation is 180 sec.

LCD screen power setting  
**Please pay attention to the direction of short pin.**

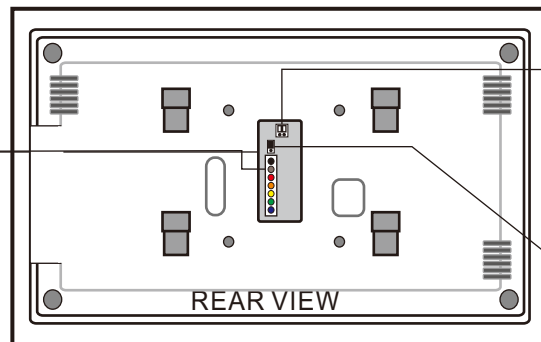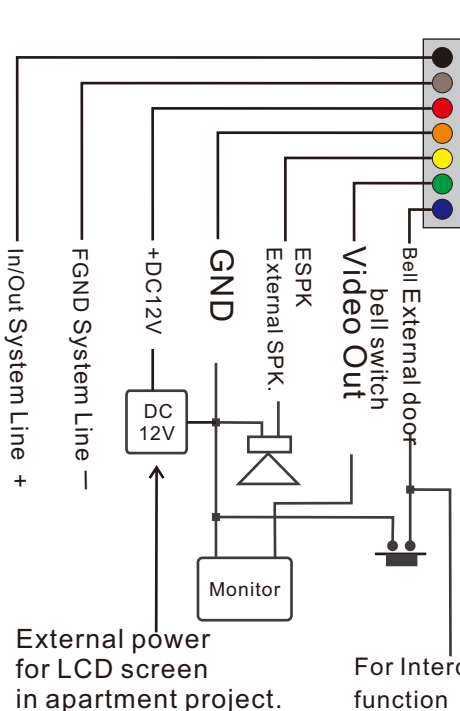

- The LCD screen power is from the main line ( for single house project)
- The LCD screen power is from external DC12V power (for apartment project)

**Dummy Load**

- OFF
- ON

## Specifications

Working Voltage: DC15V from 915P  
 Current Consumption : Stand-by 40mA,  
 Working 170mA(the power of LCD screen is from external DC12V)  
 Working 450mA(the power of LCD screen is from main line of doorphone)

## Accessories


1. 7-pin connector 1
2. Monitor Bracket 1
3. Screw Bag 1

Resolution: Color 7" 800RGB(H)x480(V)  
 Installation way: Surface mounting type  
 Material: Aluminum & ABS heat-resistant Plastic

Dimensions: (H)150mm/(W)235mm/(D)28mm  
 Weights : 700gs  
 Measurement: 0.35 cuft

# 915M7b 7" Touch Pad Handsfree video monitor

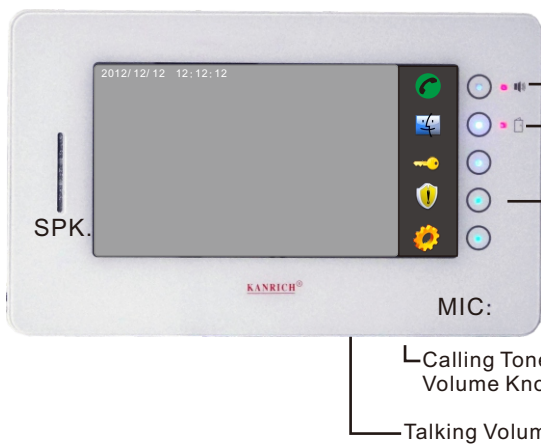

**Clock** when the screen on and time is display, access to toolbar and choose  for adjusting time.


 


- "in use" indicator / Intercom Indicator (Red)**  
The red light on - It means one of residents is using ,please wait this resident finishing talking then to use .  
The red light flashing, it means intercom function is started.
- Door Status Indicator / picture indicator(Red)**  
The red light on constantly, it means the main door is open, the red light off, it means the main door is close .  
The red light flashing, it means the new picture coming.
- Touchpad**  
In standby status,only the first key(top one) has indicator, just touch it on touch area, all 5 touch keys with 5 indicators on and screen on immediately. Please touch the touch key according to icon(on the left view of touchpad).

Calling Tone Volume Knob  
Talking Volume Knob





## Code setting/Main monitor & Sub monitor setting



**Code setting :** When system is standby and touch "  +  ",you will hear "Du" on 915M7b and on camera ,too. Please enter "monitor code"on camera immediately , 915M7b will get this call and send "Ding-Dong" , it means a successful code setting .

**Main monitor-Sub monitor setting :** Keep touching  8 sec. at least ,you will hear a high-pitch "Du", it means to set main monitor successfully.Then, keep touching  8 sec. at least , you will hear a deep "Du",it means to set sub monitor successfully.

**PS. One apartment only can set one main monitor, if you set 2 main monitors in one apartment ,camera can't call monitor(You can hear "Ding-Dong" on monitor but no video).**

**The same problem will be happened when the system is no "main monitor" setting .**

Monitor on or operate something then return to "Home Screen", within 10 sec. without next operation, the screen will be off and return to standby status. If you need further information, please access to  , touch  and get more informaton(next pages) by touch  and  .

**Adjust clock :** The clock is on the upper left side , access to  and touch  for adjusting time .


**Adjust brightness :** Access to  and touch  for adjusting brightness .

**Check pictures or change picture quantity :** Access to  , touch **SD** for choosing 0/1/3 .

**PS.1.** The period of taking picture, all buttons are locked temporarily till finish taking picture.

2. Automatically take picture set "3" - "go out" mode - one call , take 3 pictures ;  
set "1" - "at home" mode - one call, take 1 picture ;  
set "0" - "no picture" mode , no tate picture.

3. Due to the period of taking picture, all buttons are locked temporarily. When camera call monitor and start to take a picture, you have to wait till finish "take a picture" then talk with monitor . The waiting time is about 12 sec. from calling to finish taking a picture.



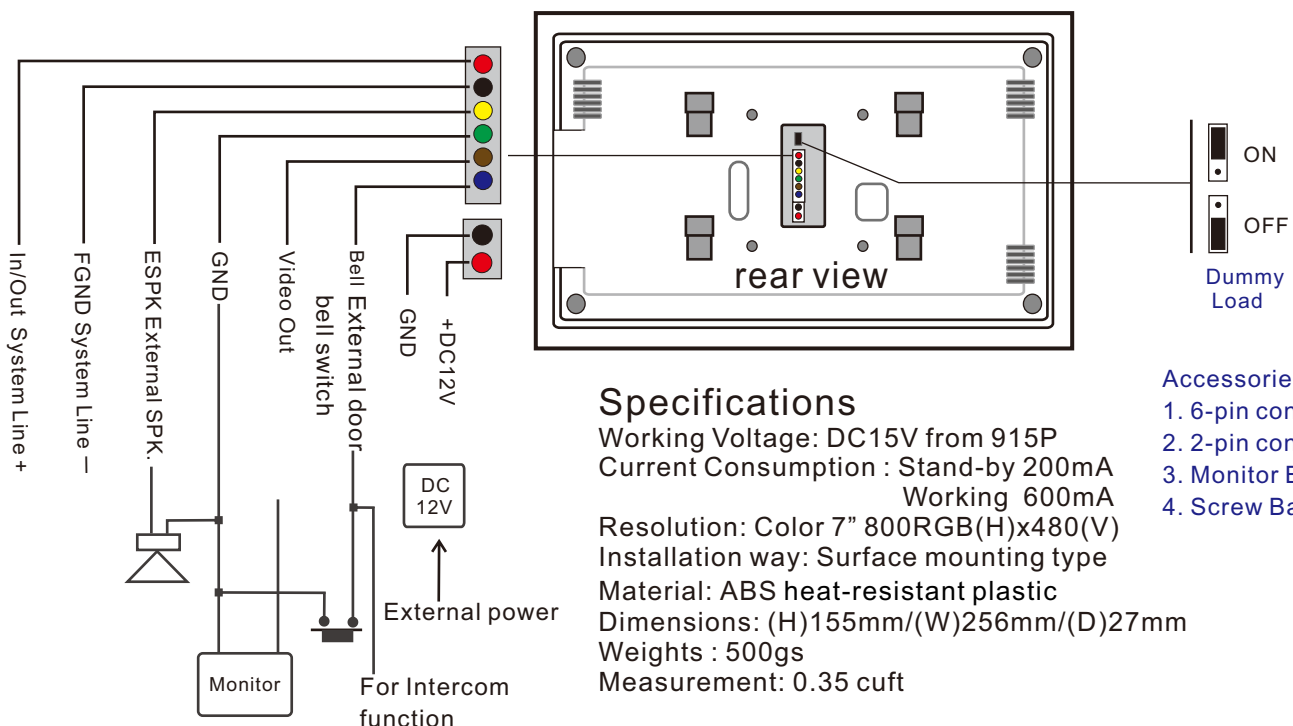






## Specifications

Working Voltage: DC15V from 915P  
Current Consumption : Stand-by 200mA  
Working 600mA  
Resolution: Color 7" 800RGB(H)x480(V)  
Installation way: Surface mounting type  
Material: ABS heat-resistant plastic  
Dimensions: (H)155mm/(W)256mm/(D)27mm  
Weights : 500gs  
Measurement: 0.35 cuft

## Accessories

1. 6-pin connector 1
2. 2-pin connector 1
3. Monitor Bracket 1
4. Screw Bag 1

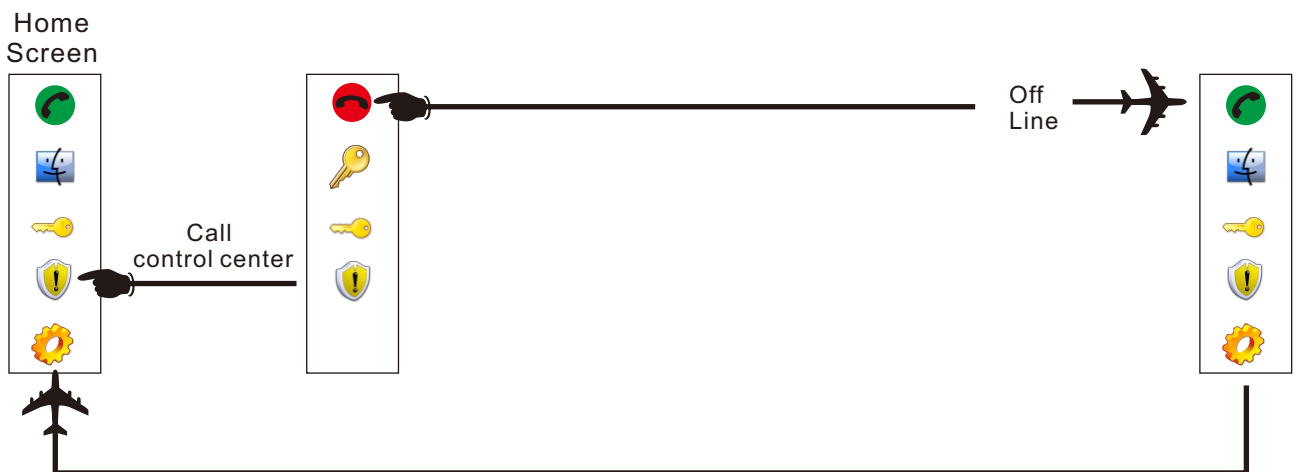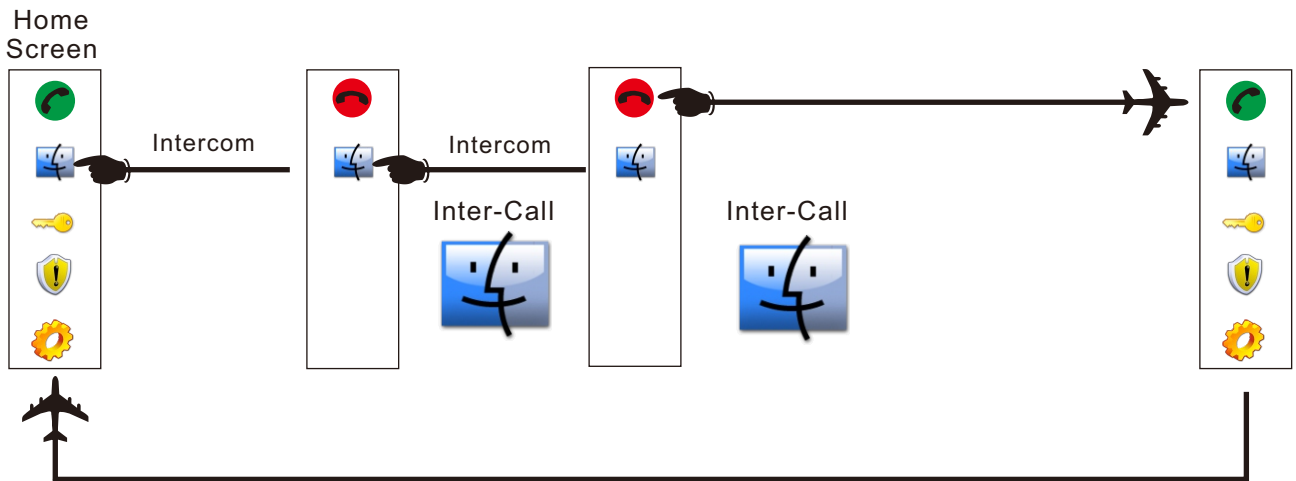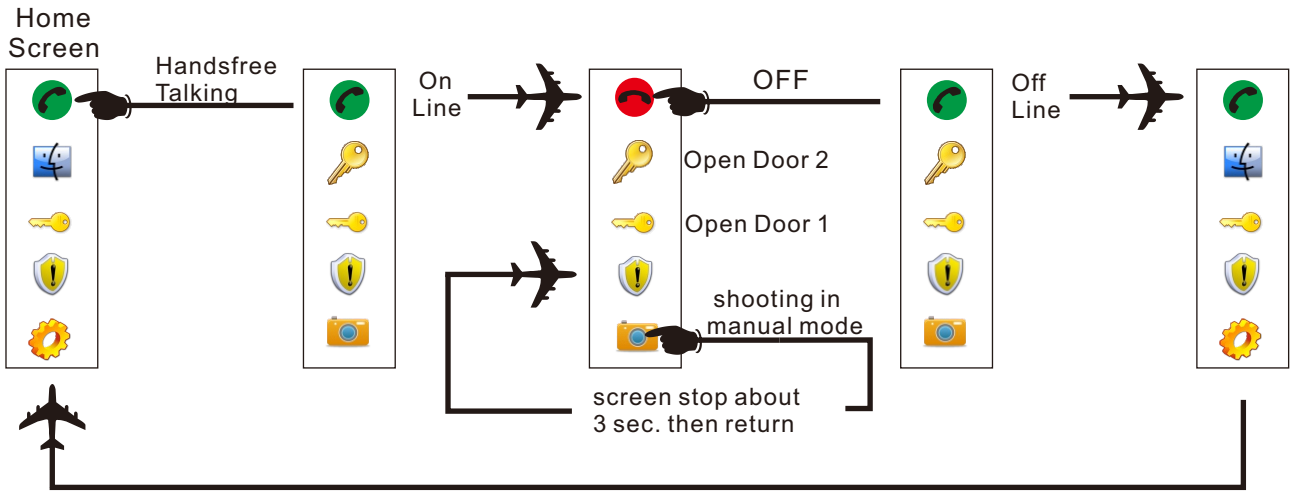

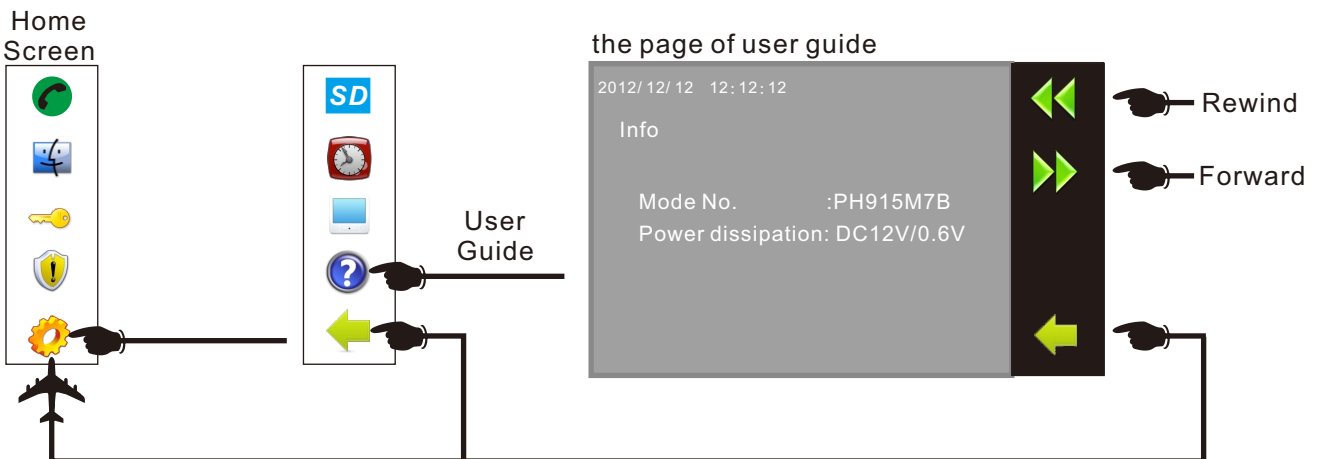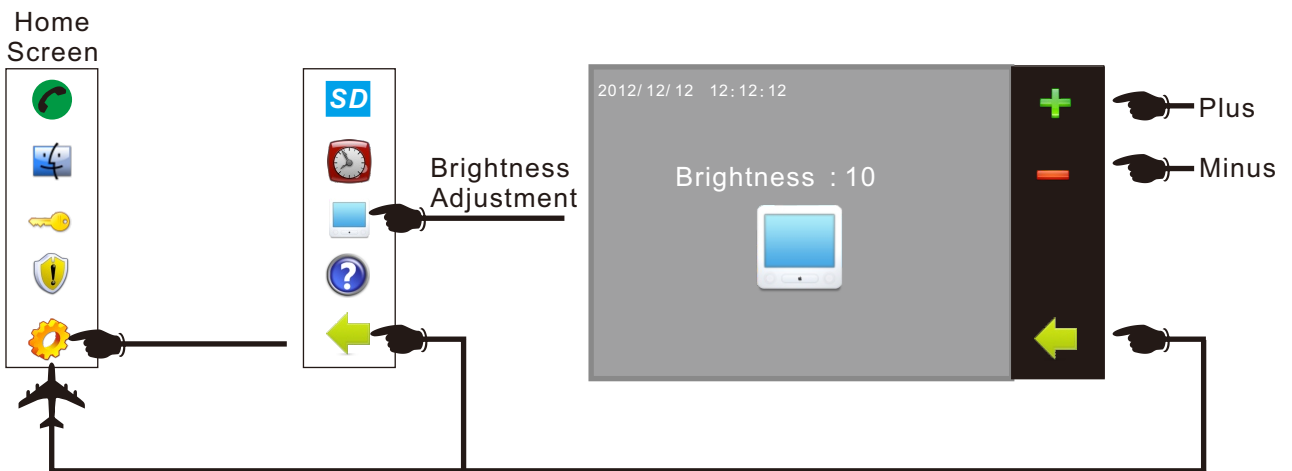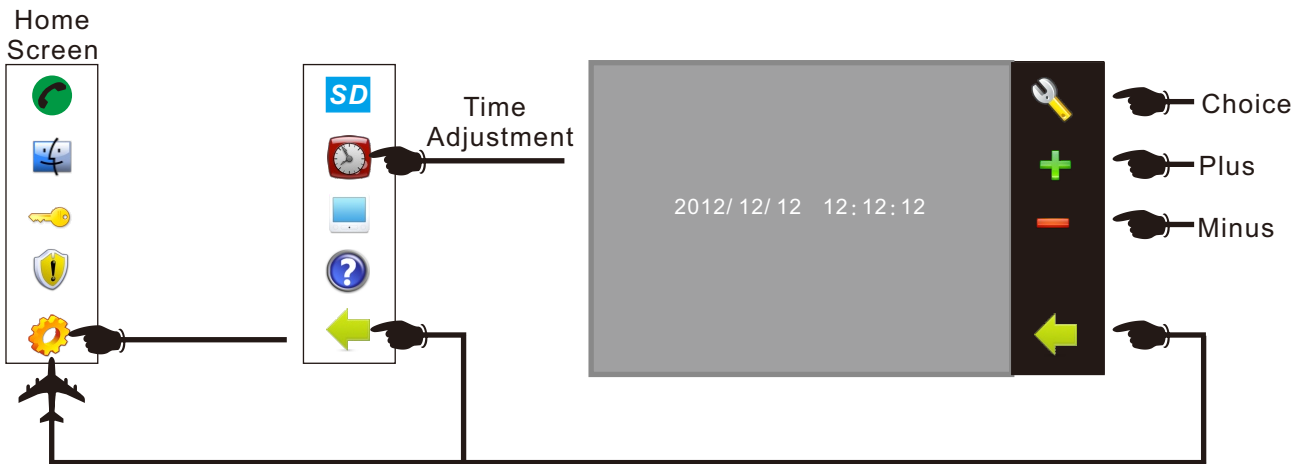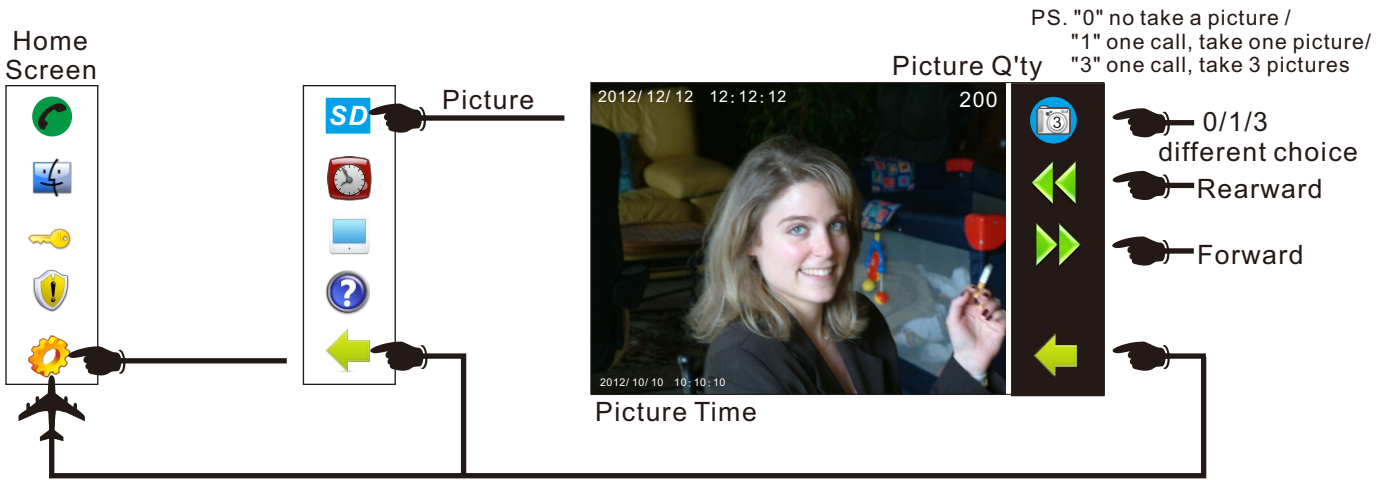

# 915M3 Audio Handset

## Resident Code Setting / Main Handset & Sub-Handset Setting



### 1. Resident Code Setting

When doorphone system is standby and press " + ", you will hear "Du" on 915M3 and on camera, too. Please enter "resident code" on camera immediately, 915M3 will get this call and send "Ding-Dong", it means a successful code setting.

### 2. Main Handset or Sub-Handset Setting

Press this button 8 sec. at least and you will hear a high-pitched "Du", this handset is set as main handset. Press this button 8 sec. at least and you will hear a low-pitched "Du", this handset is set as sub-handset. To identify the "Du" is high-pitched or "low-pitched" as main or sub handset. If there are 2 monitors(915M) or "monitor(915M) + audio handset" in one house, it is necessary to set main monitor and sub-monitor(handset) because one house only allow one main monitor, other monitors(handsets) are sub-monitors(handsets).

## Intercom / Door Release - 2

### 1. Intercom

Pick up the handset and press this button and talk with another monitor(or handset), the talking time is 3 min. Hang up the handset and finish talking.

### 2. Door Release - 2

When a calling is from camera, pick up the handset and press this button to open the 2nd door.

## Door Release - 1 / Resident Code Setting

### 1. Door Release - 1

When a calling is from camera, press this button and pick up the handset to open the 1st door.

### 2. Resident Code Setting

When doorphone system is standby and press " + ", you will hear "Du" on 915M3 and on camera, too. Please enter "resident code" on camera immediately, 915M3 will get this call and send "Ding-Dong", it means a successful code setting.

## Handset

Pick up the handset and talk with camera or other monitors when you hear the ringing tone, the talking time limitation is 180 sec. When you are talking with camera, an intercom call coming, please hang up the handset first then pick up the handset again for getting this intercom call.




Power Indicator  
On - Green


In Use / Intercom Indicator  
On - Red :  
System in using, after Led off then to use.  
Flashing - Red :  
Intercom in using, after Led off then to use.

Door Status Indicator  
On - Red Door is Open


## Rear View of Front Cover

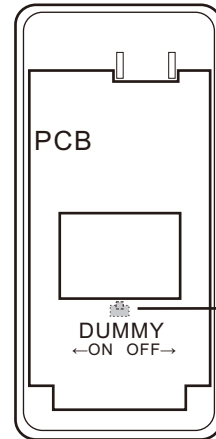

Dummy Load Switch  
Set "ON"

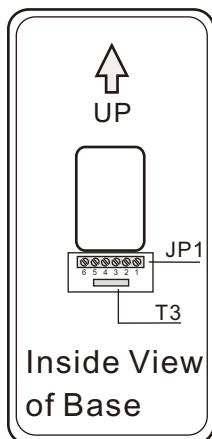


Inside View  
of Base

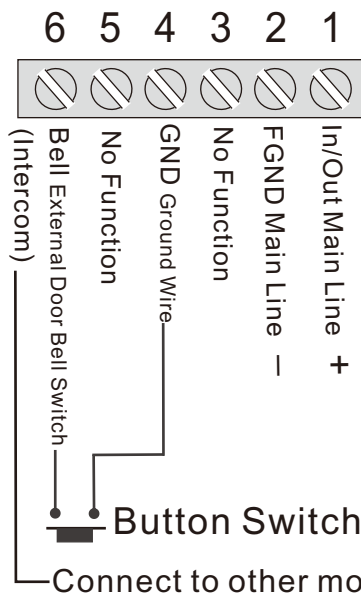

## Specifications

Working Voltage:  
DC15V from 915P  
Current Consumption :  
Stand-by 40mA, Working 150mA  
Communicating Interface:  
the modulated carrier wave signal  
Installation way: Surface mounting type  
Material: ABS heat-resistant plastic  
Dimensions: (H)206mm/(W)92mm/(D)58mm  
Weights : 400gs  
Measurement: 0.5 cuft

# 915Mg Audio Handset

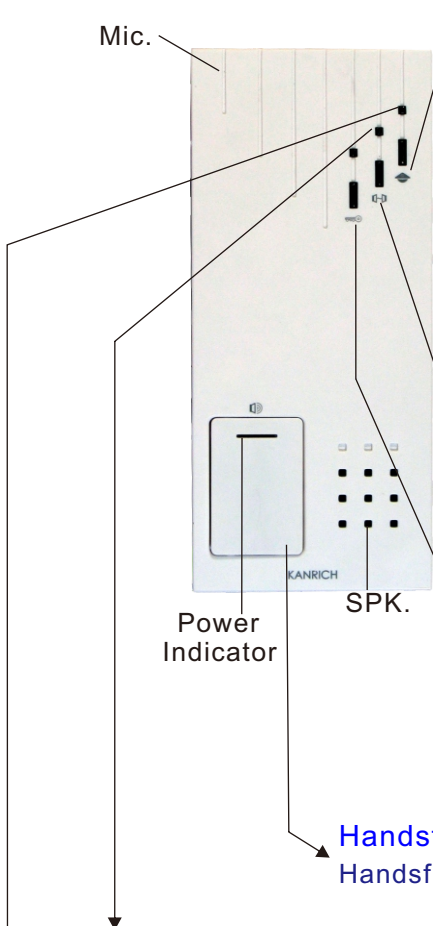

## Code setting button/Main monitor & Sub monitor setting button

**Code setting button :** When doorphone system is standby and press "☎ + 📞", you will hear "Du" on 915Mg and on camera ,too. Please enter "915Mg code"on camera immediately , 915Mg will get this call and send "Ding-Dong" , it means a successful code setting .

**Main monitor-Sub monitor setting button :** Hold "☎ " 8 sec. at least ,you will hear a high-pitch "Du" , it means to set main monitor successfully. Then, hold this button 8 sec. at least , you will hear a deep "Du" , it means to set sub monitor successfully.

**PS. One apartment only can set one main monitor, if you set 2 main monitors in one apartment , camera can't call monitor normally ,the doorphone system will happen problem ,camera can't make a call to this apartment .**

## Intercom Button/ NO Contact Point

**Intercom** Press this button to intercom and talk with other monitors in this apartment .

**NO Contact Point** When monitor screen is started , press this button and drive this contact point in camera then to start other devices.

## Door Release Button /Code setting button

**Door Release** Press " 📞 " this button for opening door.

**Code setting button :** When doorphone system is standby and press "☎ + 📞", you will hear "Du" on 915M35 and on camera ,too. Please enter "monitor code"on camera immediately , 915M35 will get this call and send "Ding-Dong" , it means a successful code setting .

## Handsfree Talking Button


**Handsfree Talking button:** Press it for getting a call and talking . After talking press it again for finish.

**Door Status Indicator :** The red LED constantly lights on , it means the door is open, the red LED lights off , it means the door is close .

## "In Use"indicator / Intercom call Indicator(Red):

The red LED constantly on, it means one of residents is using this doorphone system,please wait this resident finishing talking then to use it .

**Intercom Indicator :** This indicator is flashing , it means intercom function is started.

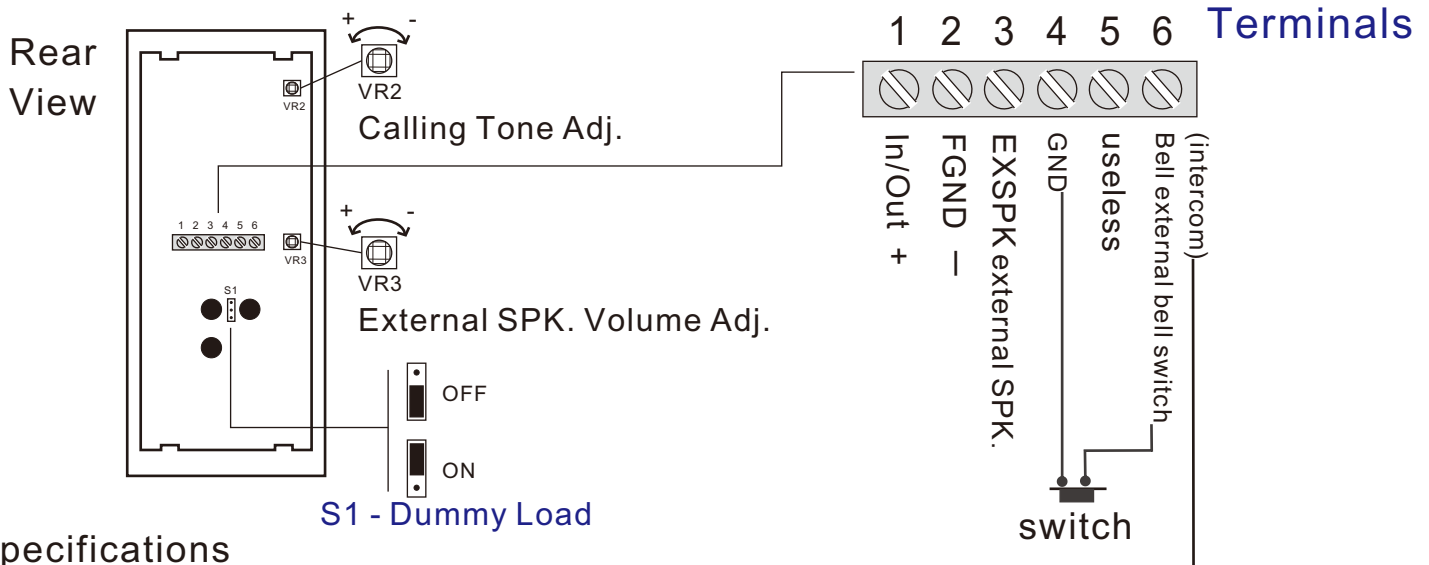


## Specifications

Working Voltage: DC15V from 915P  
 Current Consumption :  
 Stand-by 40mA, Working 150mA  
 Communicating Interface:  
 the modulated carrier wave signal  
 Installation way: Surface mounting type  
 Material: ABS heat-resistant plastic  
 Dimensions: (H)210mm/(W)94mm/(D)40mm  
 Weights : 300gs  
 Measurement: 0.08 cuft




Connect to monitor to monitor when one apartment(or house) has 2 monitors(or handsfree audio).

# 915P Power Supply


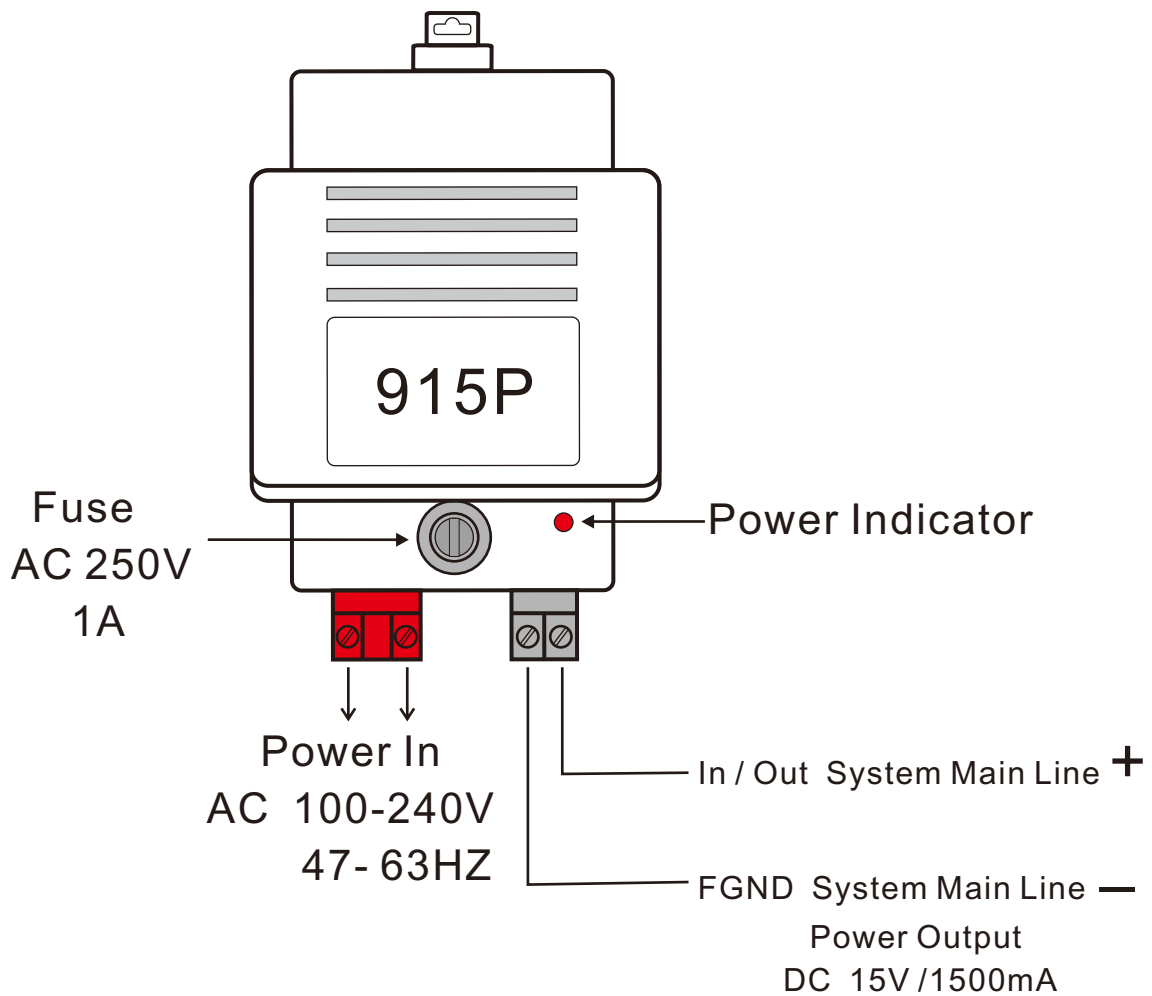




# 915C10AL Camera

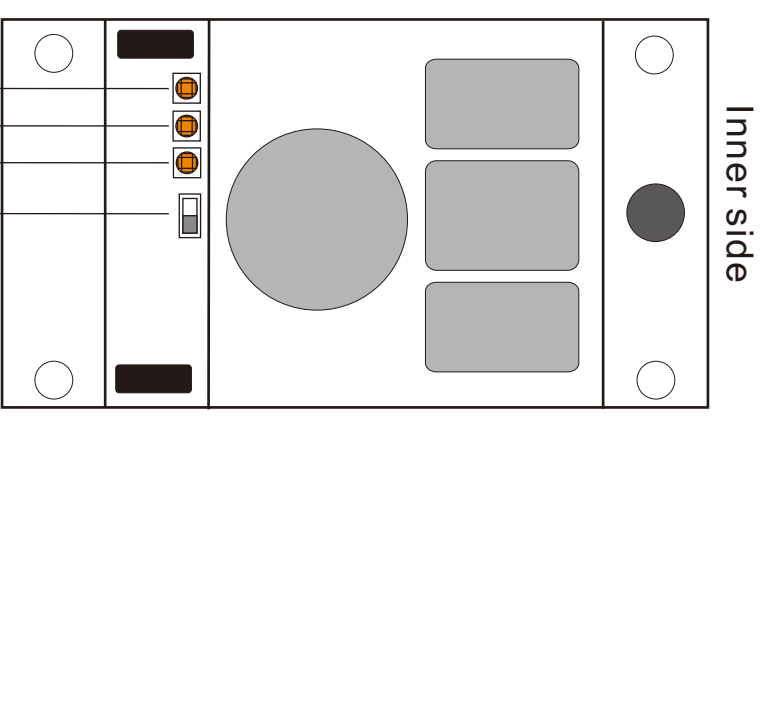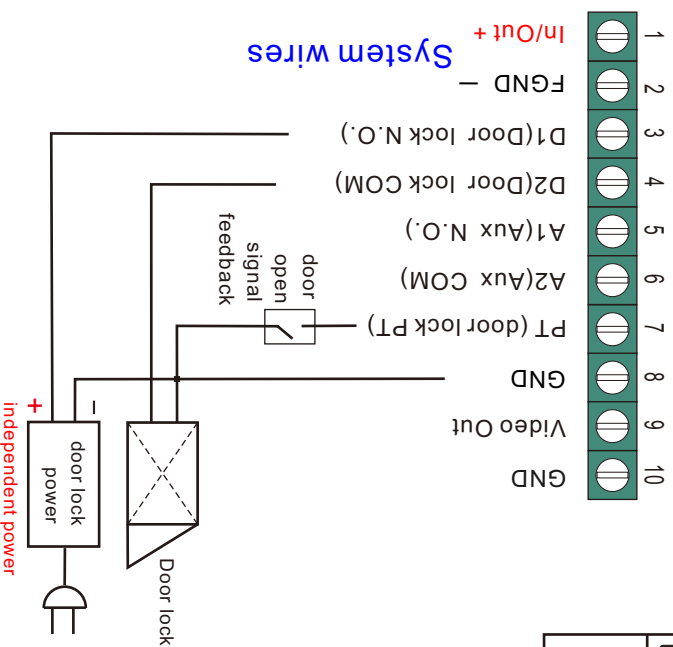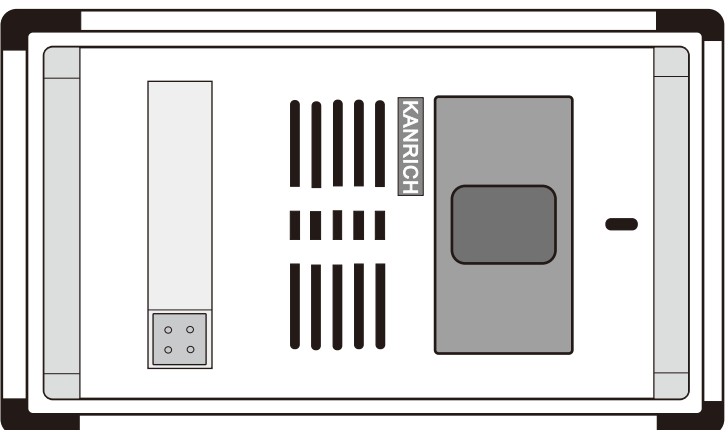

# 915M7 7" Handsfree Monitor

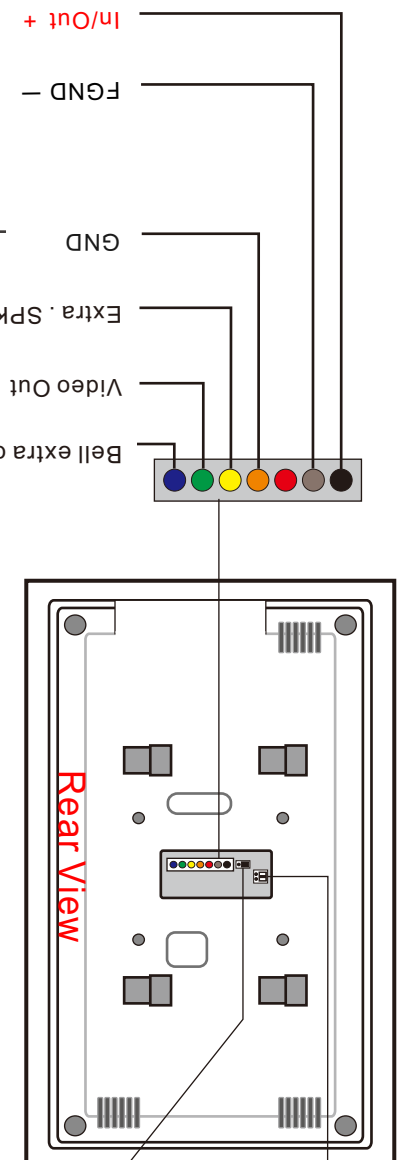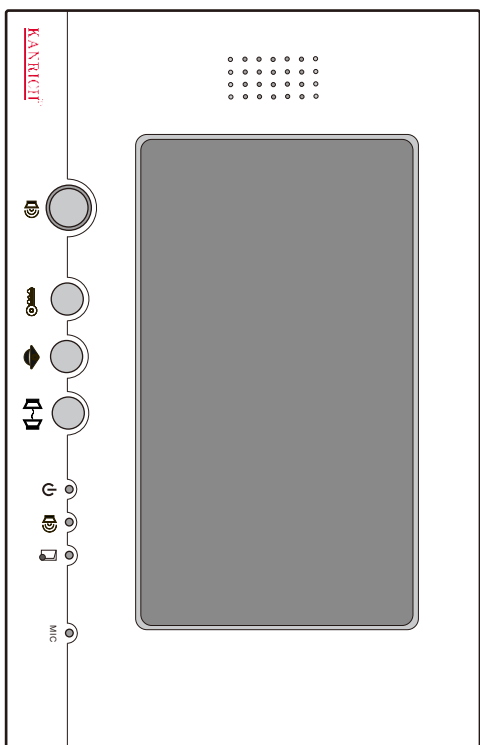


connect to other monitors within one house  
(intercom connection)

**LCD screen power setting**  
Please pay attention to  
the direction of short pin.

The LCD screen power is  
from the main line ( for single  
house project),this is default.




# 1 Camera and 1 Monitor

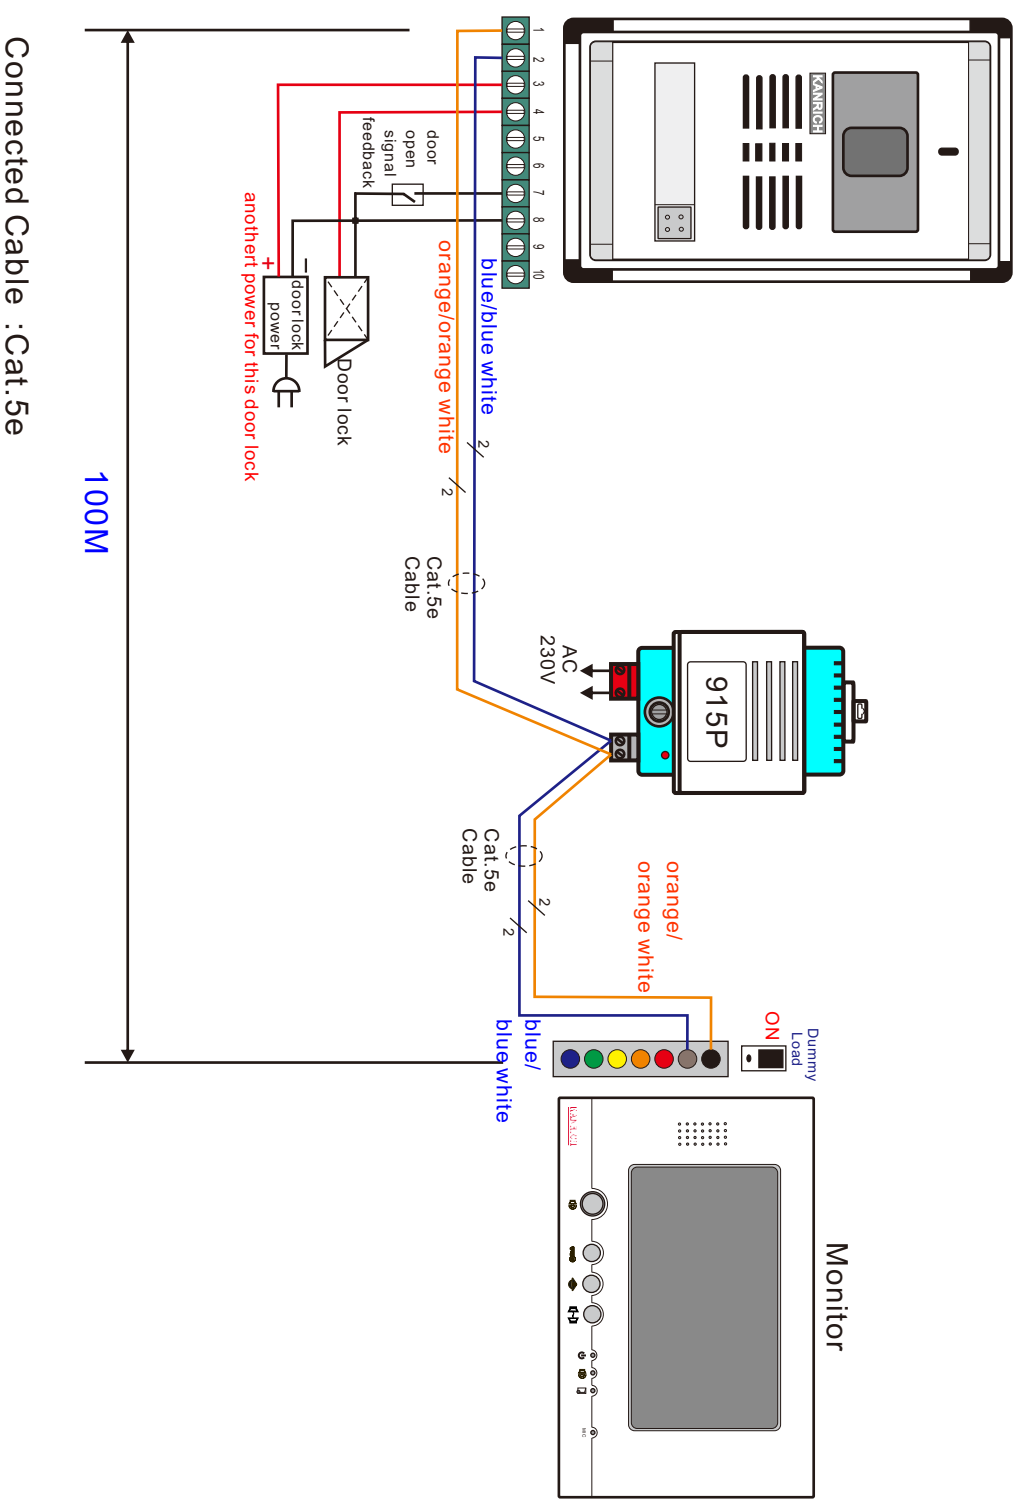

# 1 Camera and 2 Monitors

915C10AL

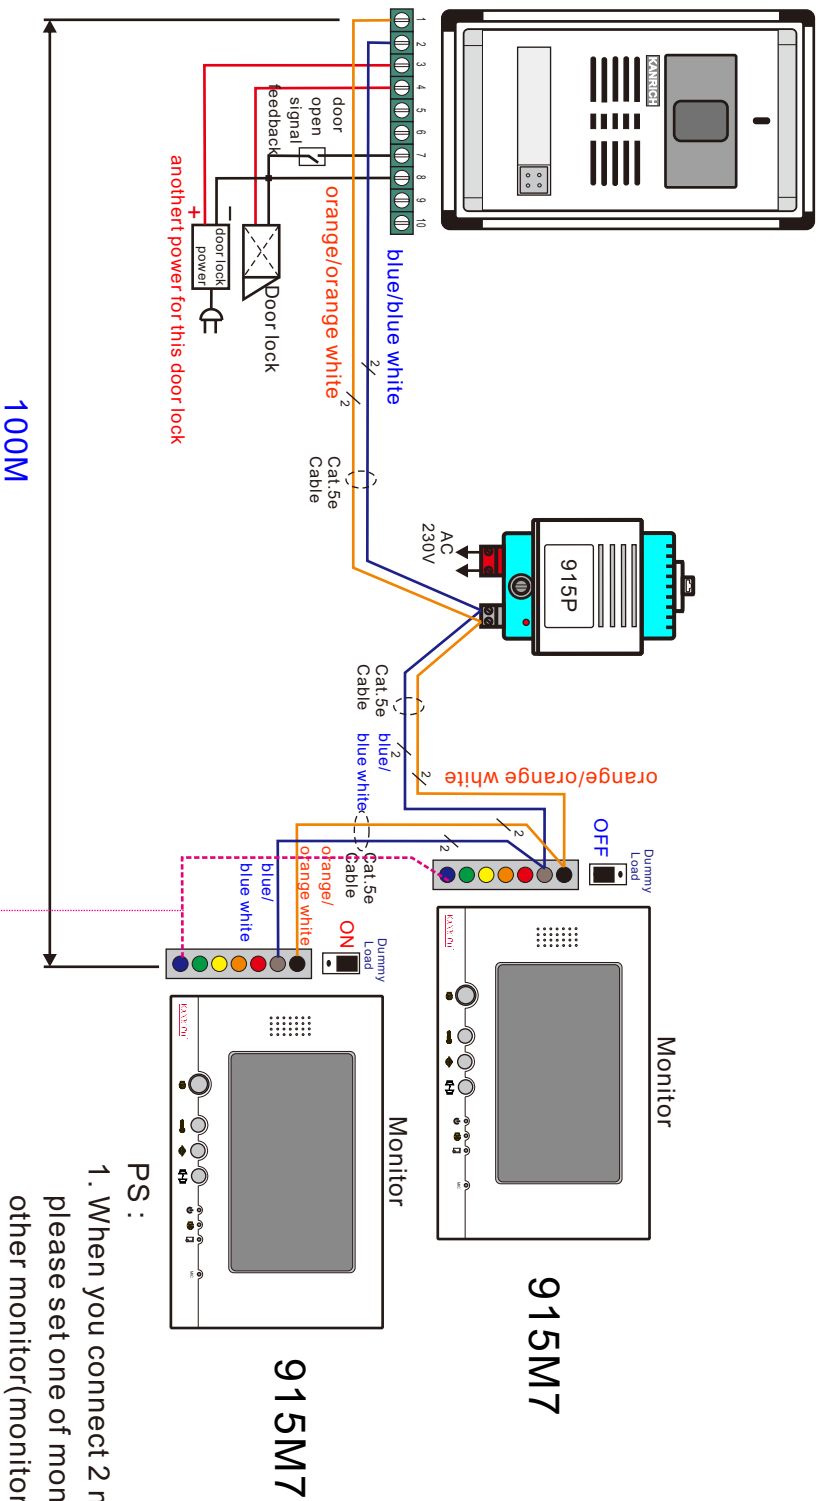

100M

Connected Cable :Cat.5e

Intercom function :

915M7 — Please connect terminal #7 between monitor and monitor.

915M35/Mi/M7b/Mg/M3 — Please connect terminal #6 between monitor and monitor .

PS :

1. When you connect 2 monitors at least, please set one of monitors to be main monitor(this is default), other monitor(monitors) is(are) set to be sub-monitor.
2. How to set main monitor and sub-monitor ?


Hold this button " " + " " 8 sec. at least ,you will hear a high-pitch "Du",it means to set main monitor successfully. Then, hold this button 8 sec. at least ,you will hear a "low & deep "Du" , it means to set sub monitor successfully.

**PS. One apartment only can set one main monitor, if you set 2 main monitors in one apartment , camera can't call monitor normally ,the doorphone system will happen problem ,camera can't make a call to this apartment .**

# 1 Camera and 3 Monitors

915C10AL

915M7

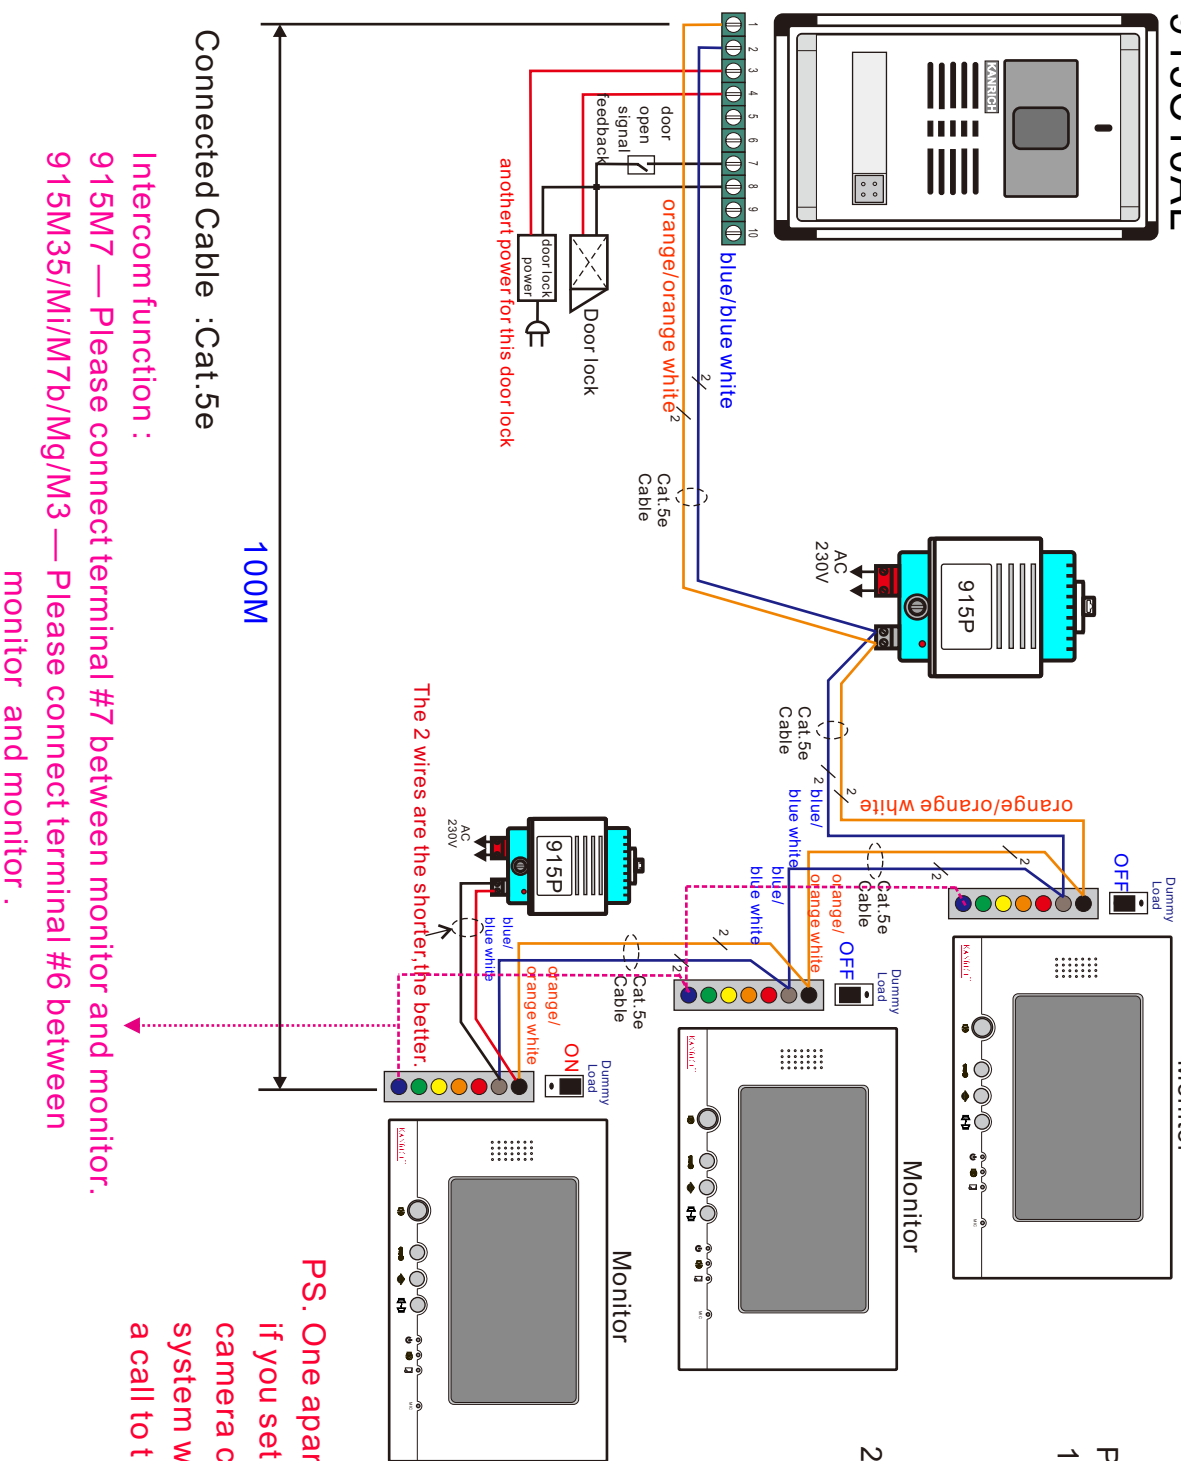

Connected Cable : Cat.5e

100M

Intercom function :

915M7 — Please connect terminal #7 between monitor and monitor.

915M35/Mi/M7b/Mg/M3 — Please connect terminal #6 between monitor and monitor .

PS :

- When you connect 2 monitors at least, please set one of monitors to be main monitor (this is default), other monitor (monitors) is (are) set to be sub-monitor.

- How to set main monitor and sub-monitor ?  
Hold this button " + " 8 sec. at least, you will hear a high-pitch "Du", it means to set main monitor successfully. Then, hold this button 8 sec. at least, you will hear a "lower deep "Du", it means to set sub monitor successfully.



915M7

PS. One apartment only can set one main monitor,


if you set 2 main monitors in one apartment, camera can't call monitor normally, the doorphone system will happen problem, camera can't make a call to this apartment .

# 1 Camera and 1 Monitor


915C10AL Camera

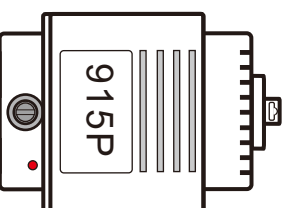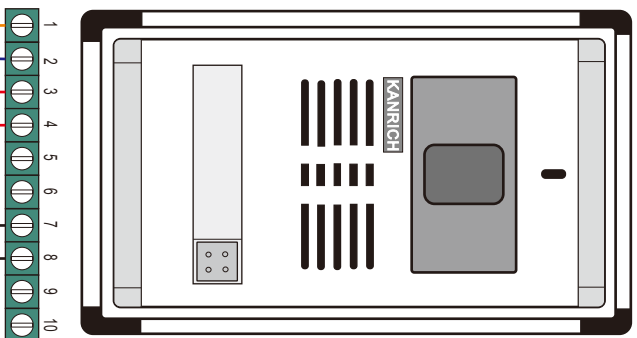

AC 230V

 

915M7b Monitor

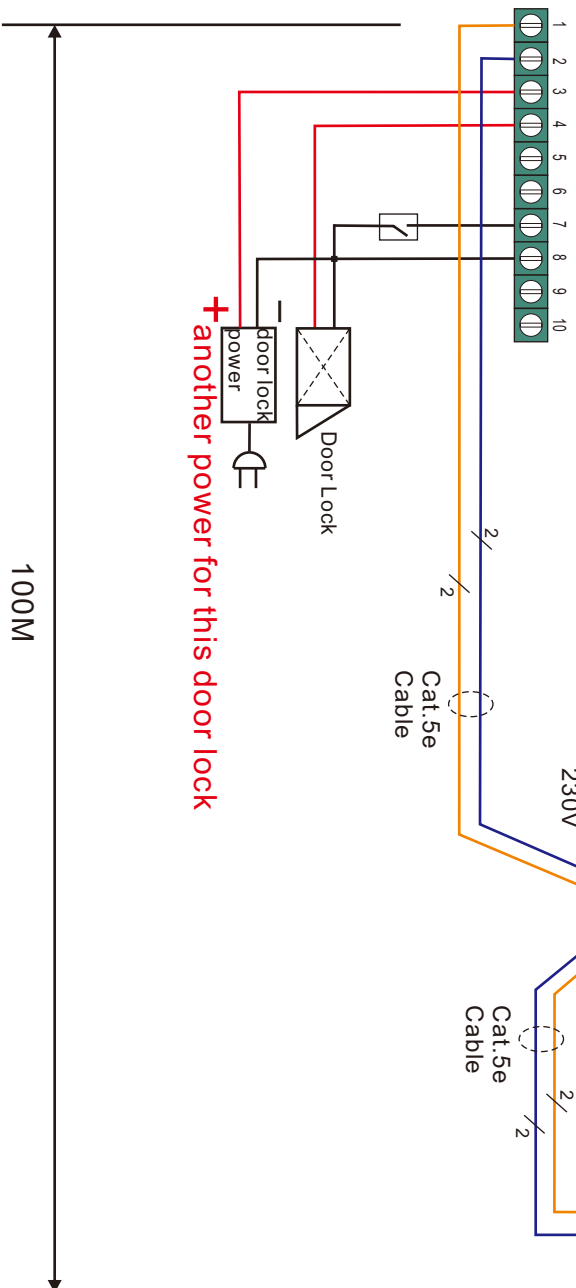


+ another power for this door lock

100M


Connected Cable : Cat.5e

# 1 Camera and 2 Monitors

## 915CALM

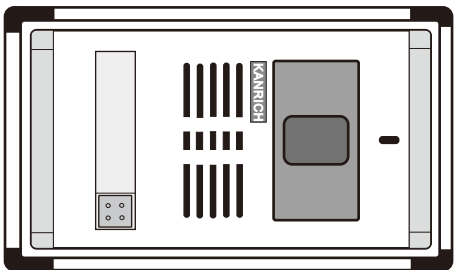

## 915M7b

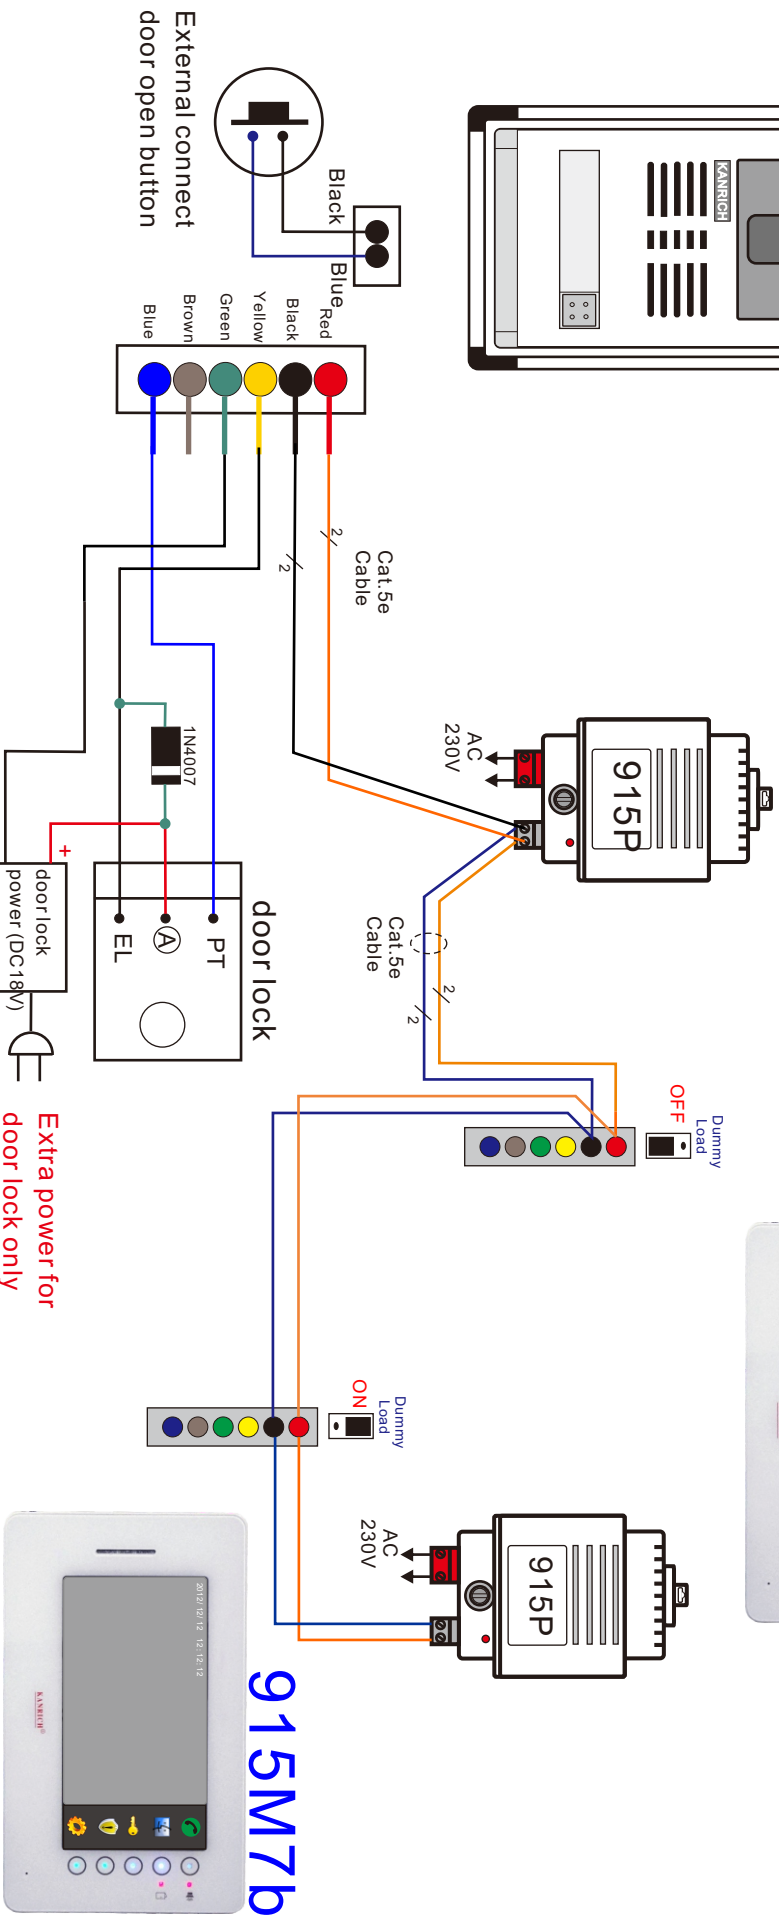

Connected Cable :

Cat.5e

### Code setting/Main monitor & Sub monitor setting


Code setting : When system is standby and touch " " + " ", you will hear "Du" on 915M7b and on camera ,too.  
Please enter "monitor code" on camera immediately , 915M7b will get this call and send "Ding-Dong" , it means a successful code setting .

Main monitor-Sub monitor setting : Keep touching " " 8 sec. at least ,you will hear a high-pitch "Du" , it means to set main monitor successfully. Then, keep touching " " 8 sec. at least , you will hear a deep "Du" ,it means to set sub monitor successfully.  
**PS. One apartment only can set one main monitor , if you set 2 main monitors in one apartment , camera can't call monitor.(You can hear "Ding-Dong" on monitor but no video).**  
The same problem will be happened when the system is no "main monitor" setting .

# 1 Camera and 2 Monitors

915C10AL Camera

915M7b Monitor

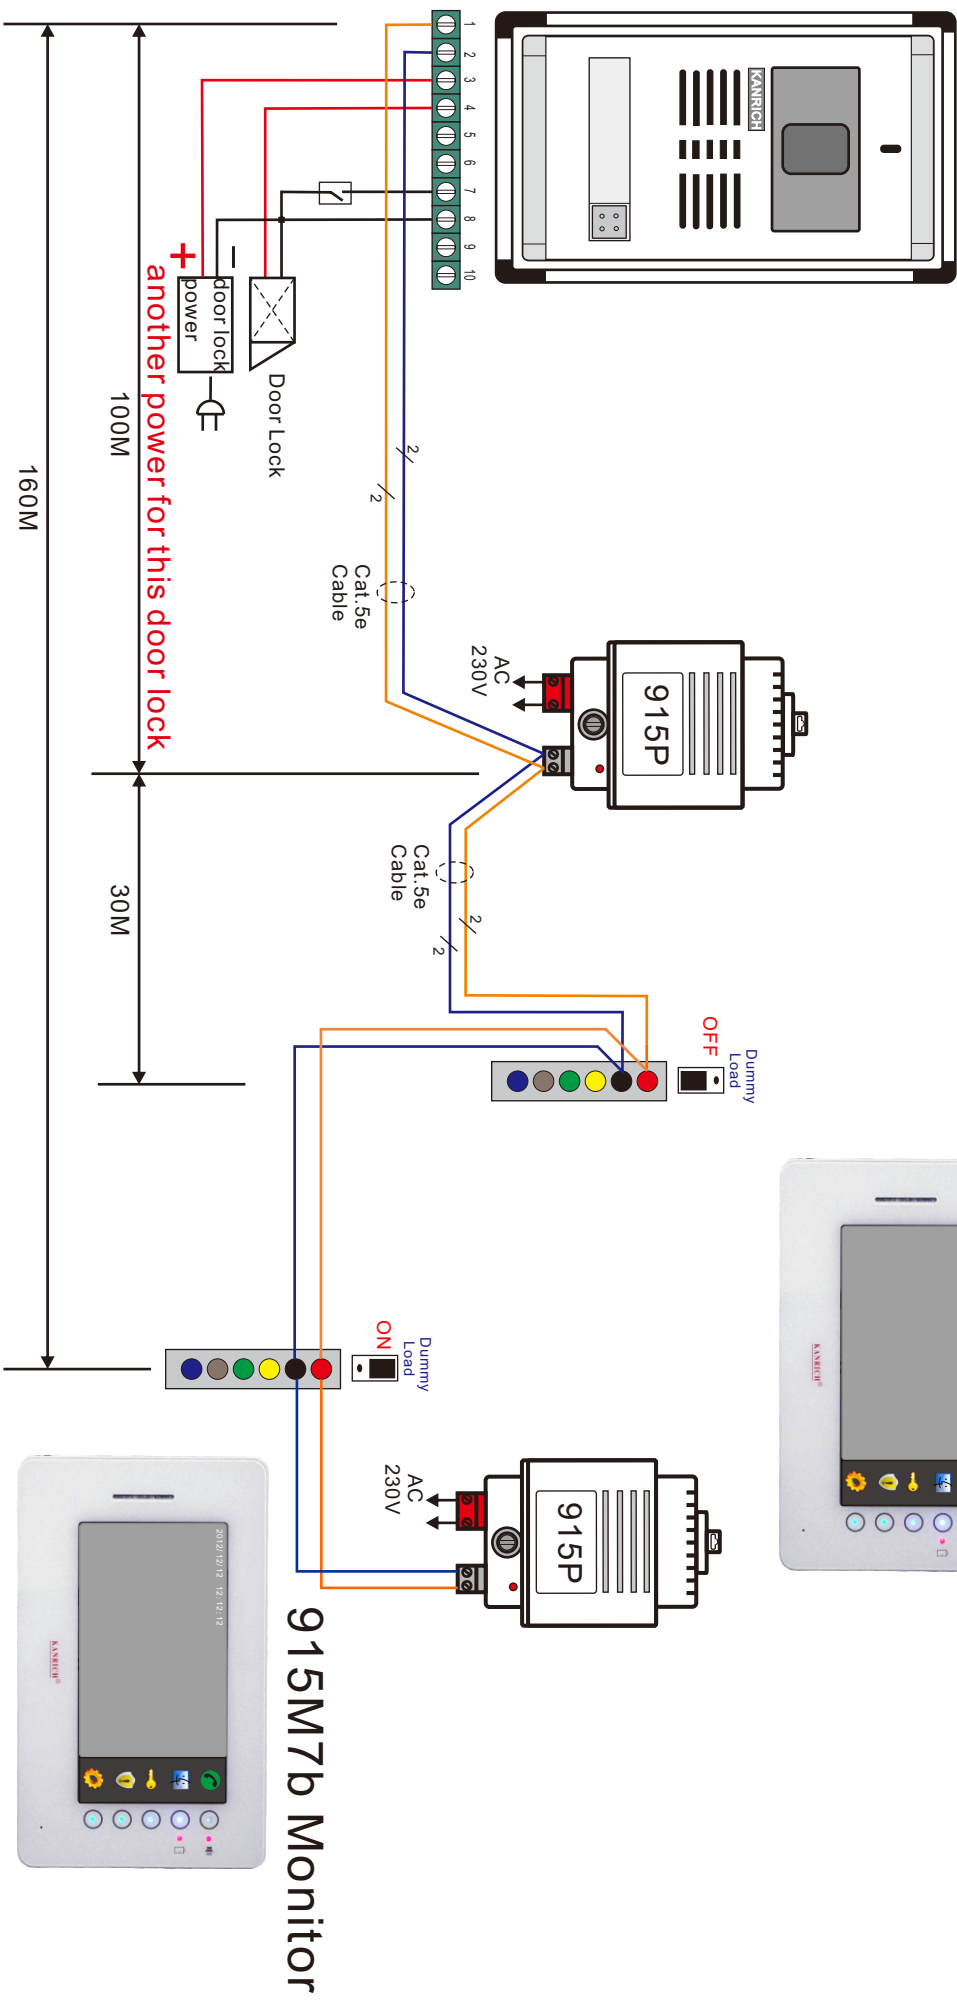

Connected Cable : Cat.5e

## Code setting/Main monitor & Sub monitor setting

Code setting : When system is standby and touch " + ", you will hear "Du" on 915M7b and on camera, too.

Please enter "monitor code" on camera immediately, 915M7b will get this call and send "Ding-Dong", it means a successful code setting.


Main monitor-Sub monitor setting : Keep touching 8 sec. at least ,you will hear a high-pitch "Du", it means to set main monitor successfully. Then, keep touching 8 sec. at least , you will hear a deep "Du", it means to set sub monitor successfully.

PS. One apartment only can set one main monitor, if you set 2 main monitors in one apartment, camera can't call monitor (You can hear "Ding-Dong" on monitor but no video).

The same problem will be happened when the system is no "main monitor" setting .



## 2-button Camera and 2 Monitors

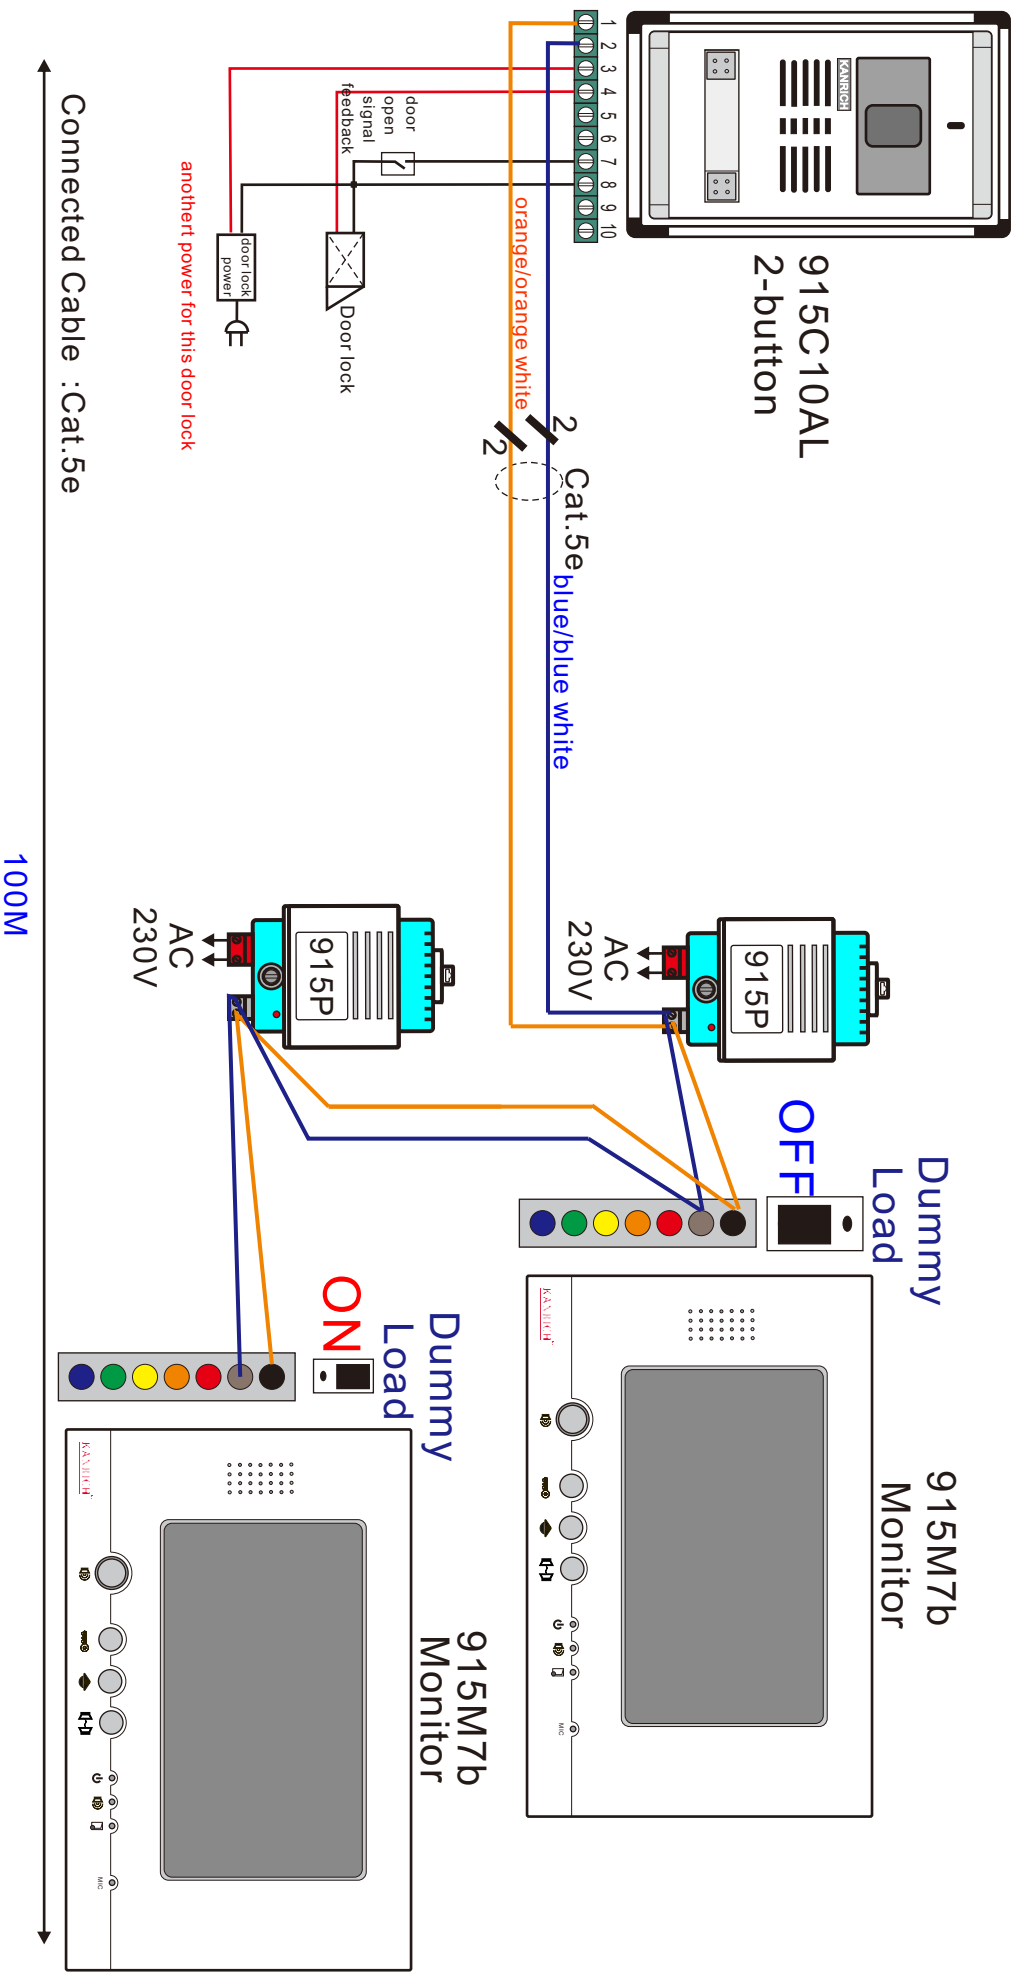

PS :

All monitors or handsets in 915 system , their defaults are to call the right button of 915C10AL . So, please do the following set steps to set the left button of 915C10AL .

Hold this button "  " + "  " 8 sec. at least ,you will hear a high-pitch "Du", it means to set main monitor successfully.